



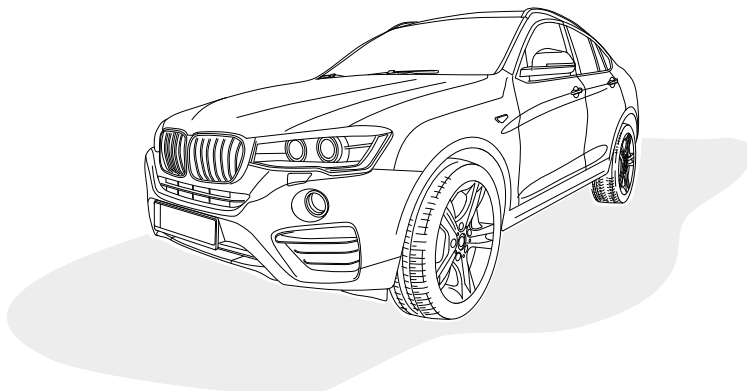

ERICH JAEGER

Installation instructions

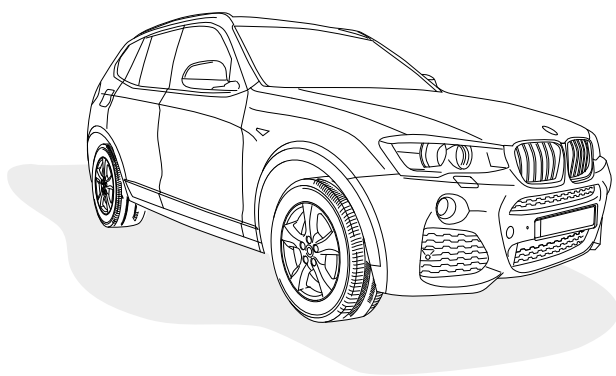

750123

BMW X3

F25

03/14 >> 10/17



BMW X4

F26

07/14 >> 07/18



SCAN FOR
LATEST
INSTRUCTIONS

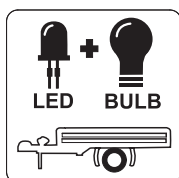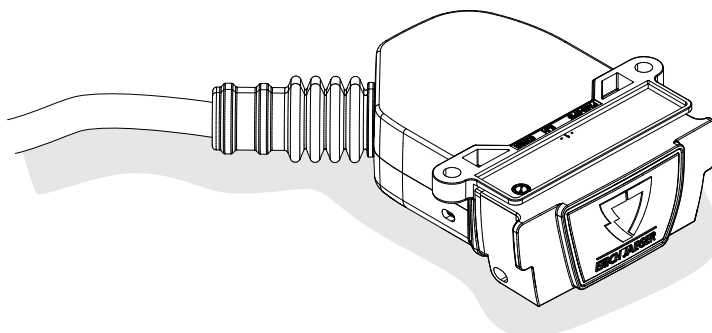

Reference:

The following information must be reviewed before beginning the assembly:

The installation instructions are to be thoroughly read.



The installation should be carried out by qualified personnel with the relevant technical knowledge.

The vehicle manufacturers' current technical notices and information on retrofitting must be followed.


The removal and replacement instructions found in the current repair manuals must be followed.


It must be ensured that the vehicle is technically suitable for the installation of a trailer hitch.


KIT

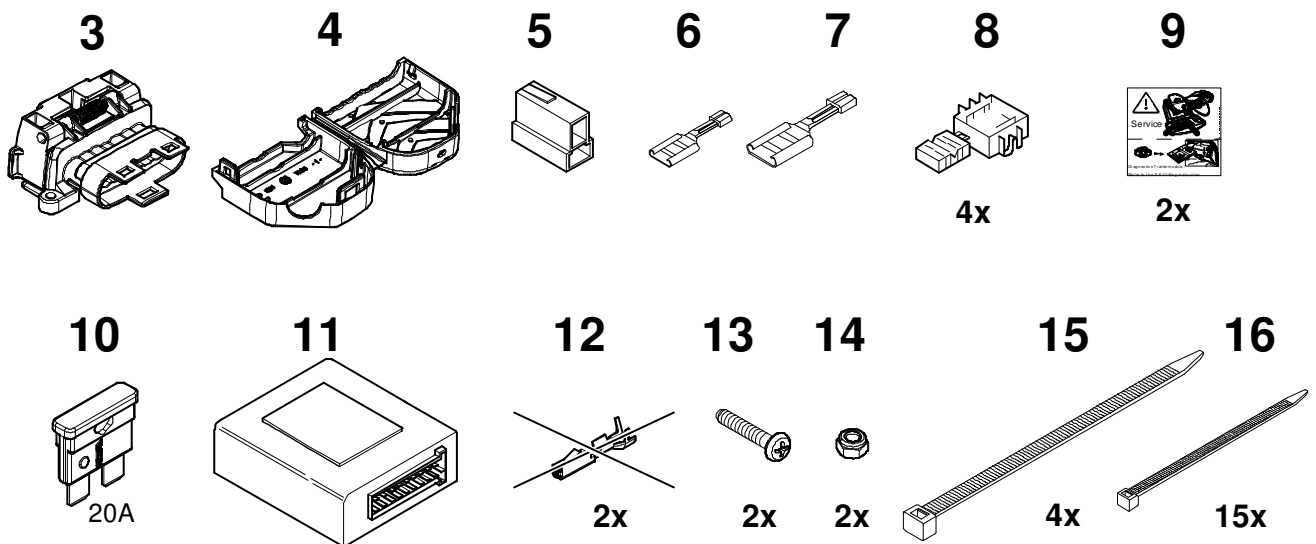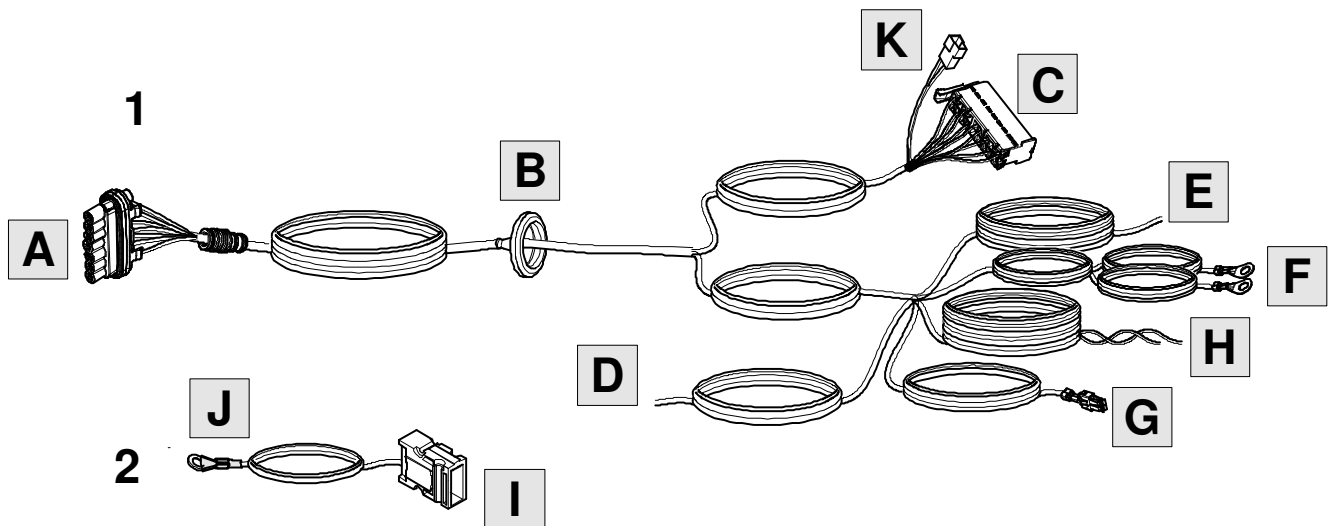















TOOLS

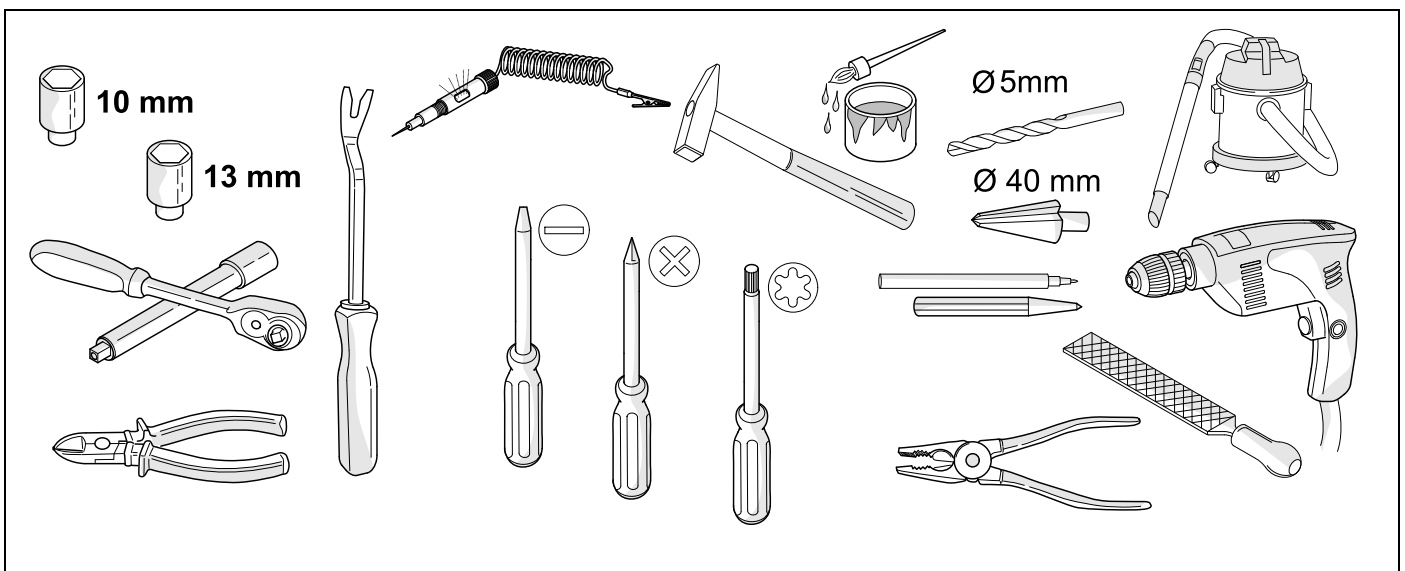



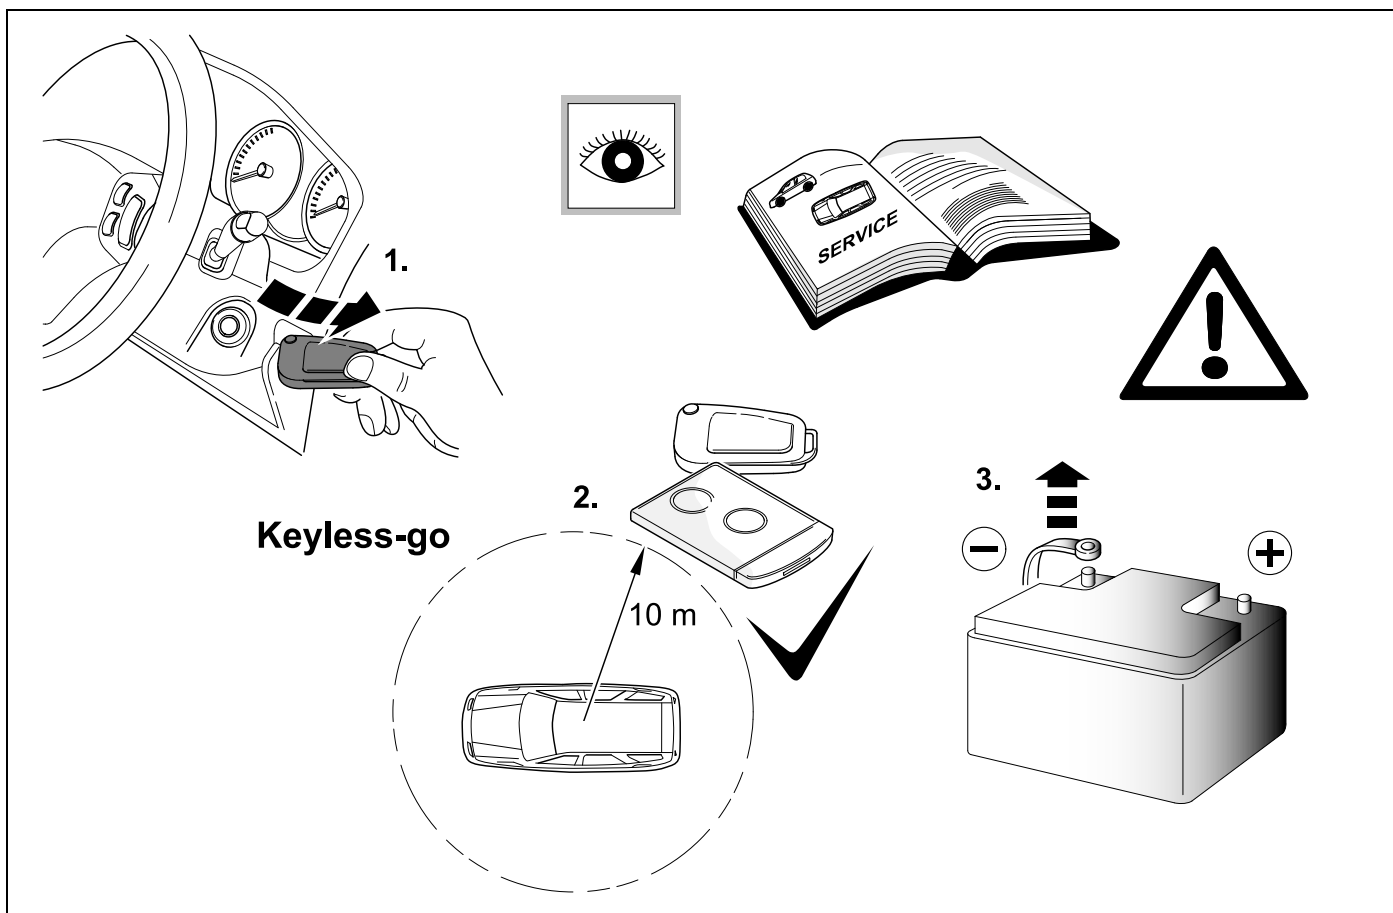


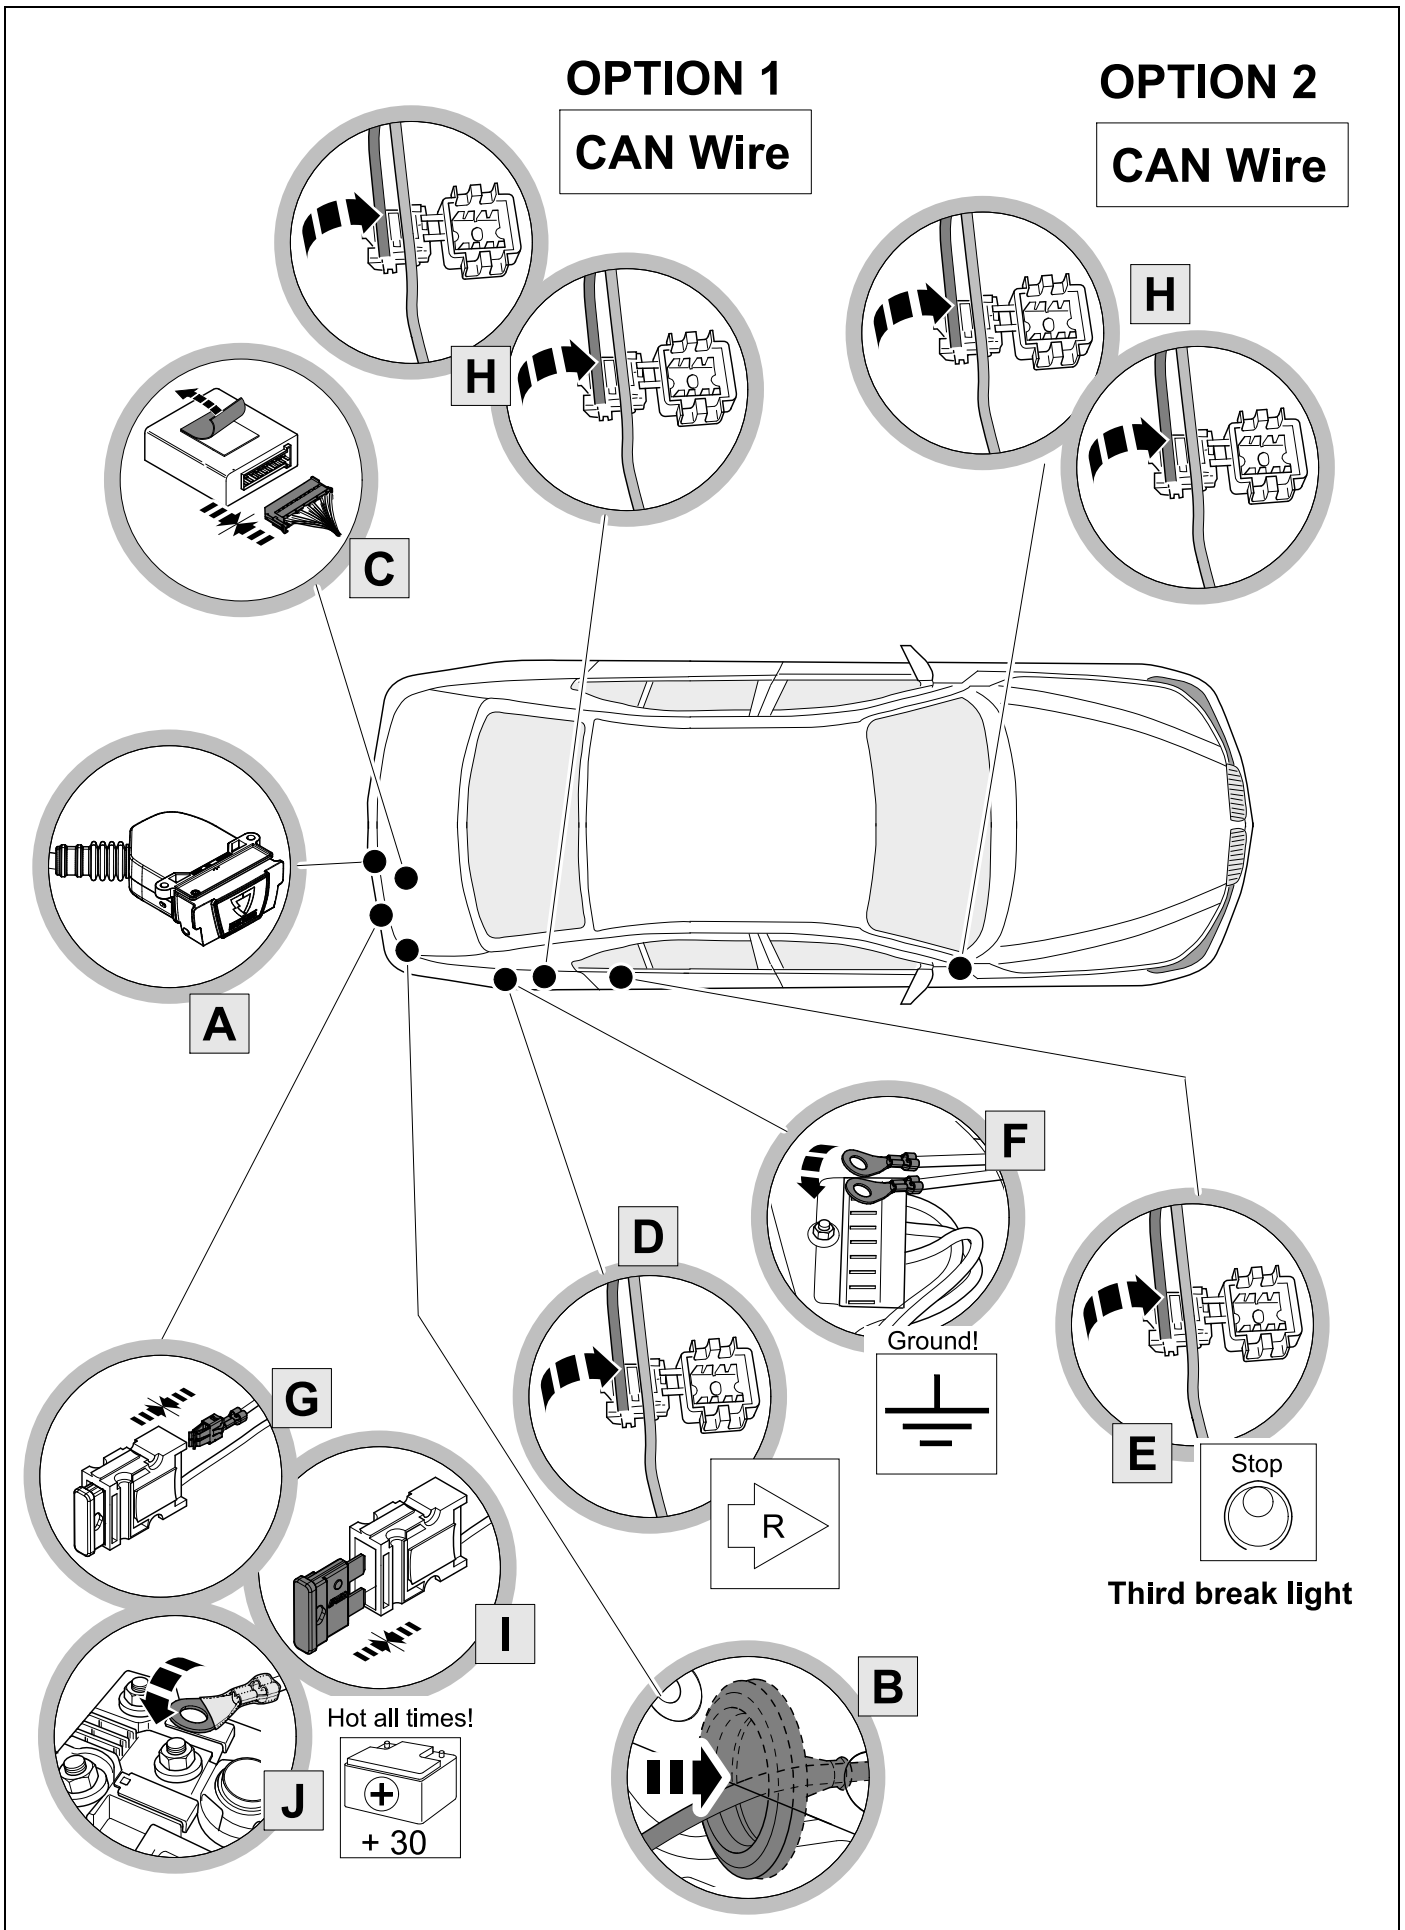

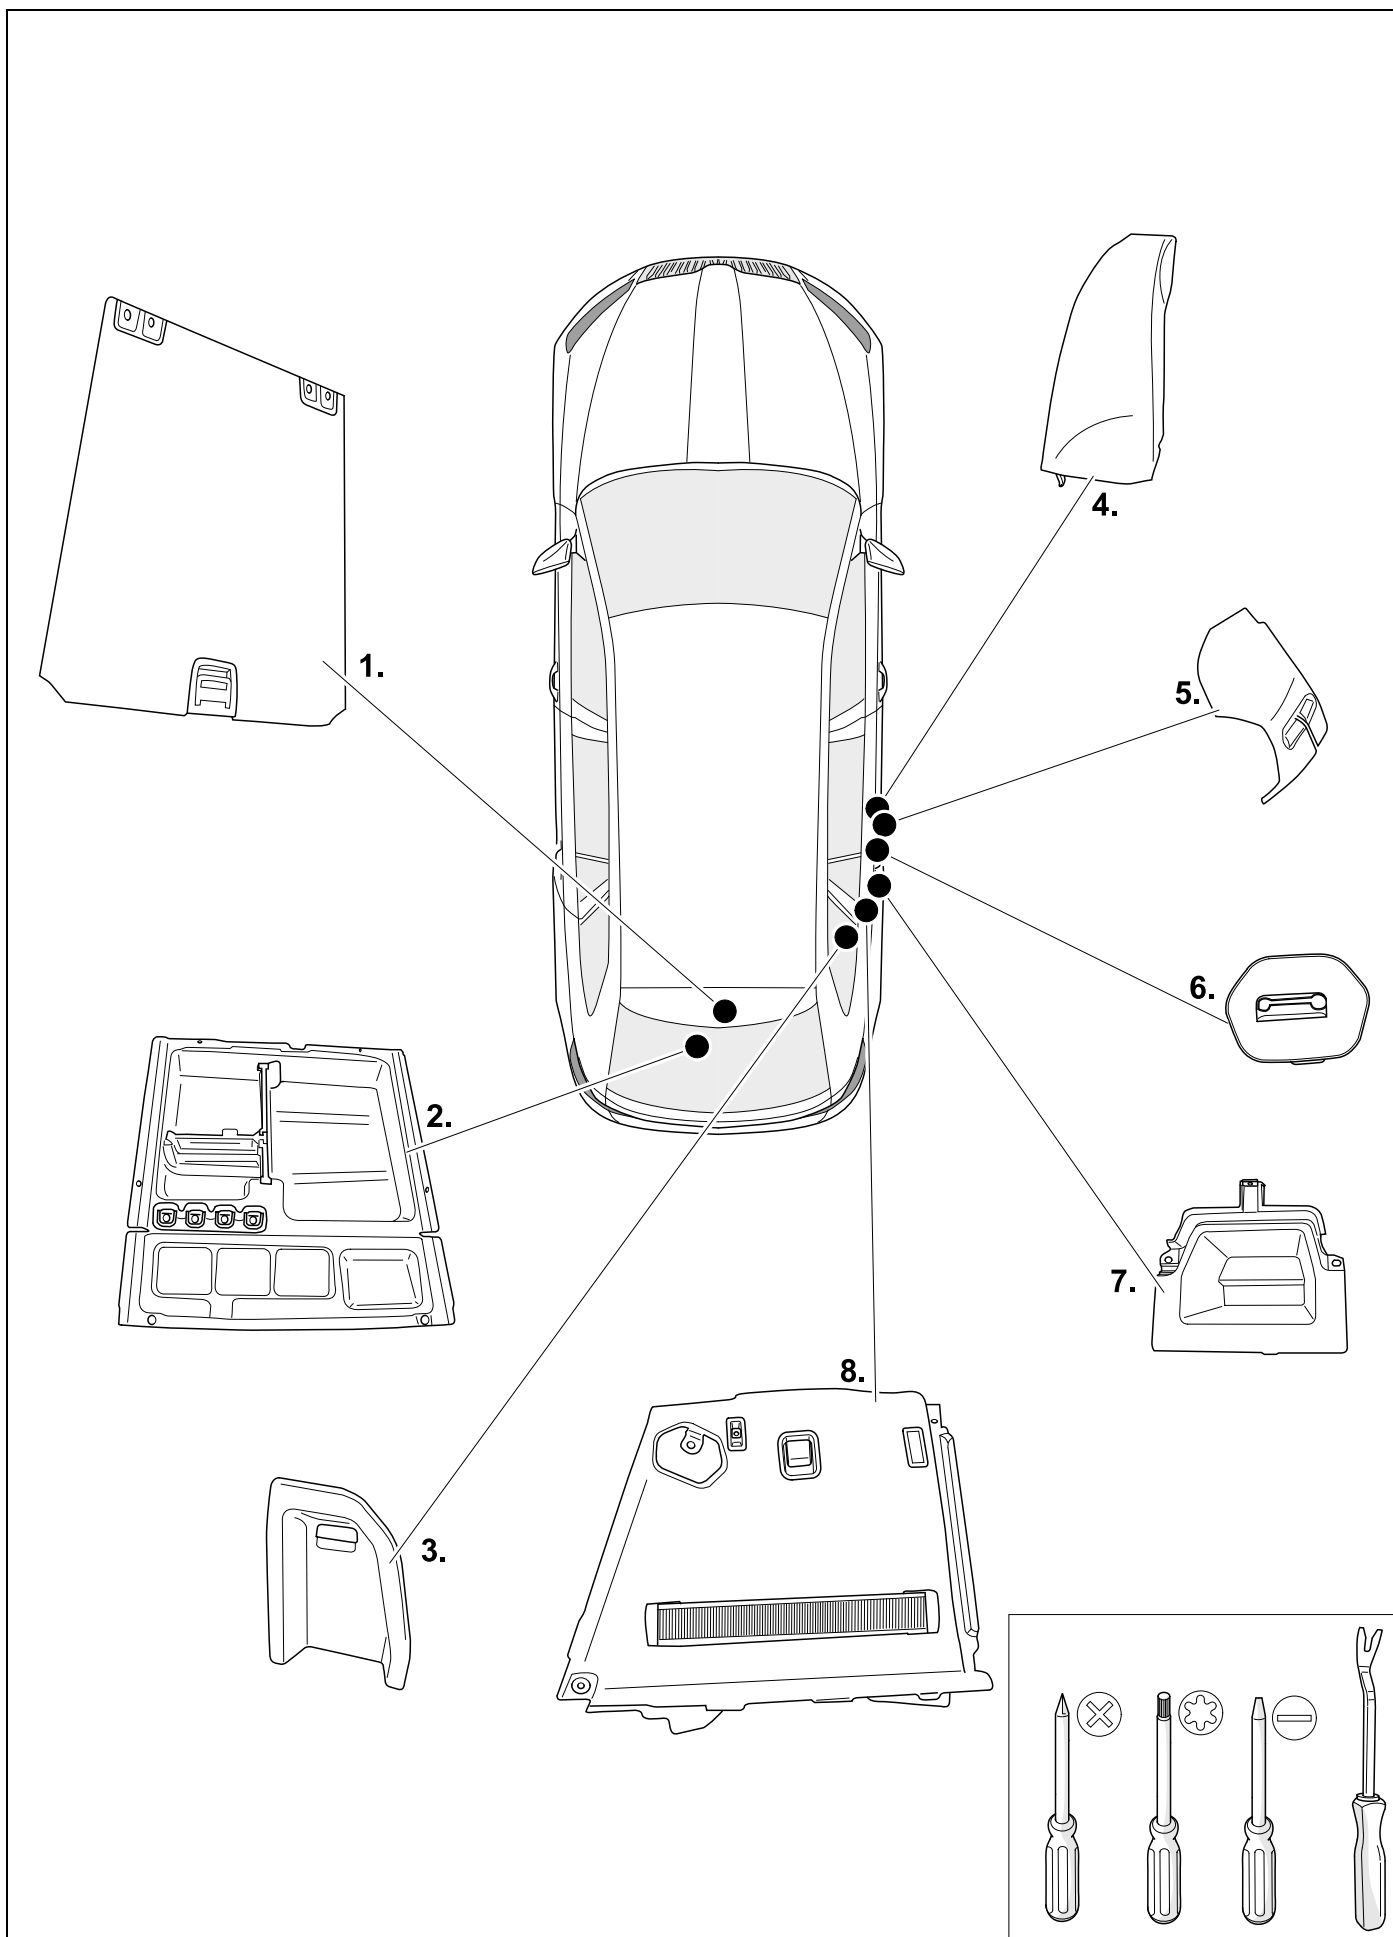


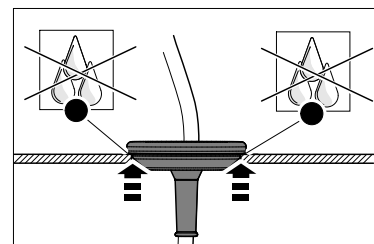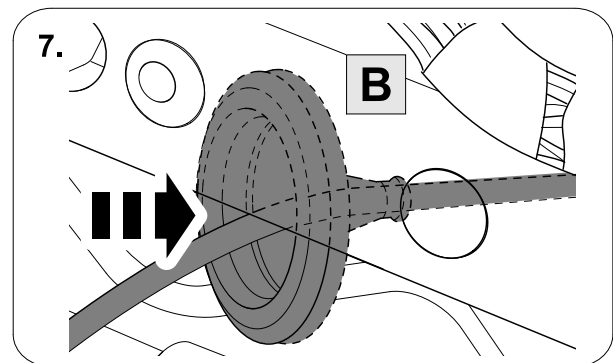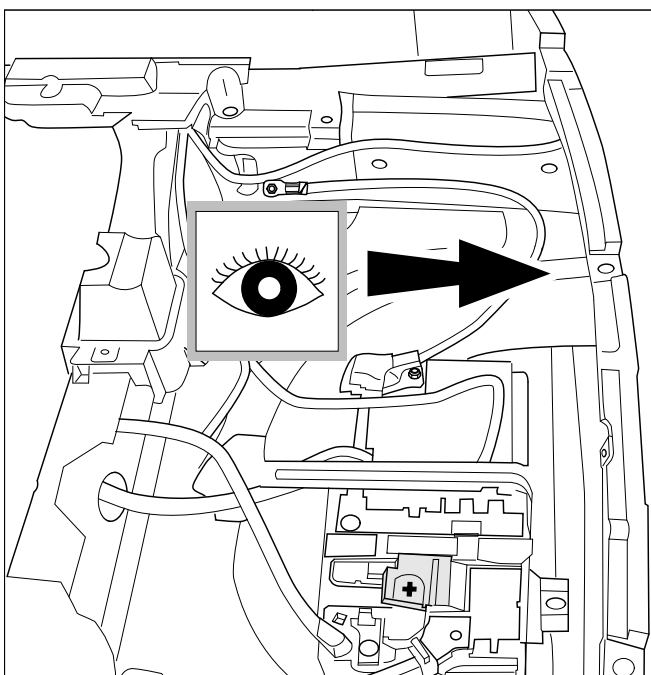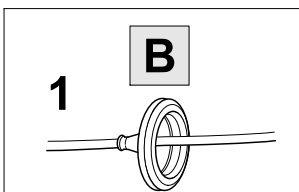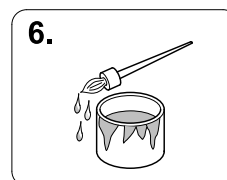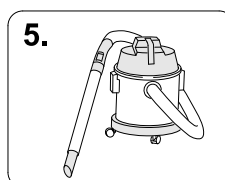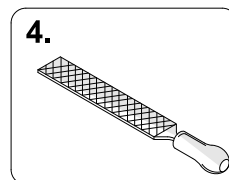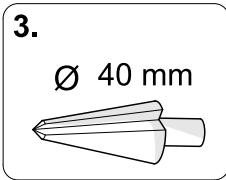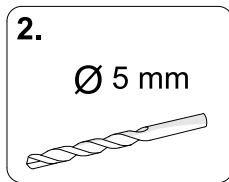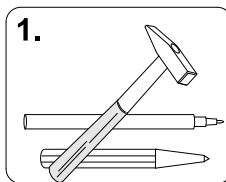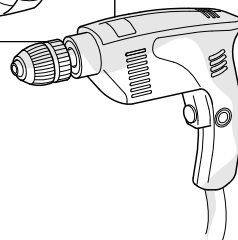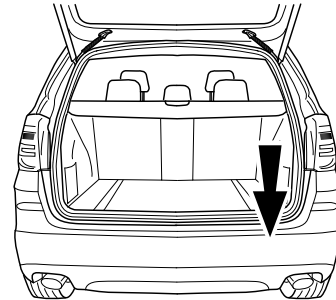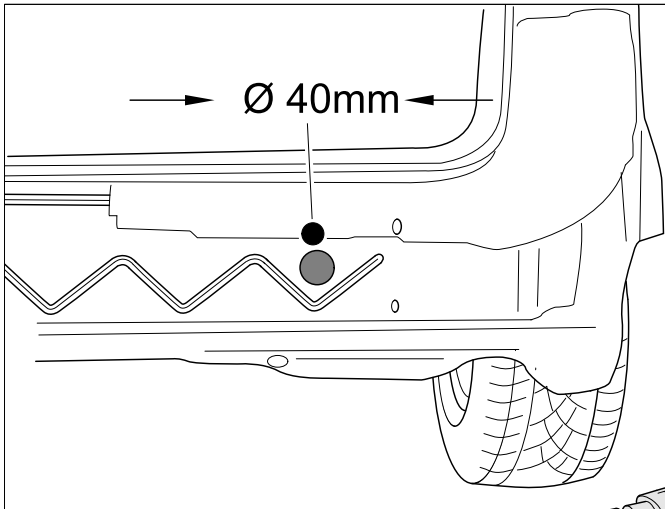



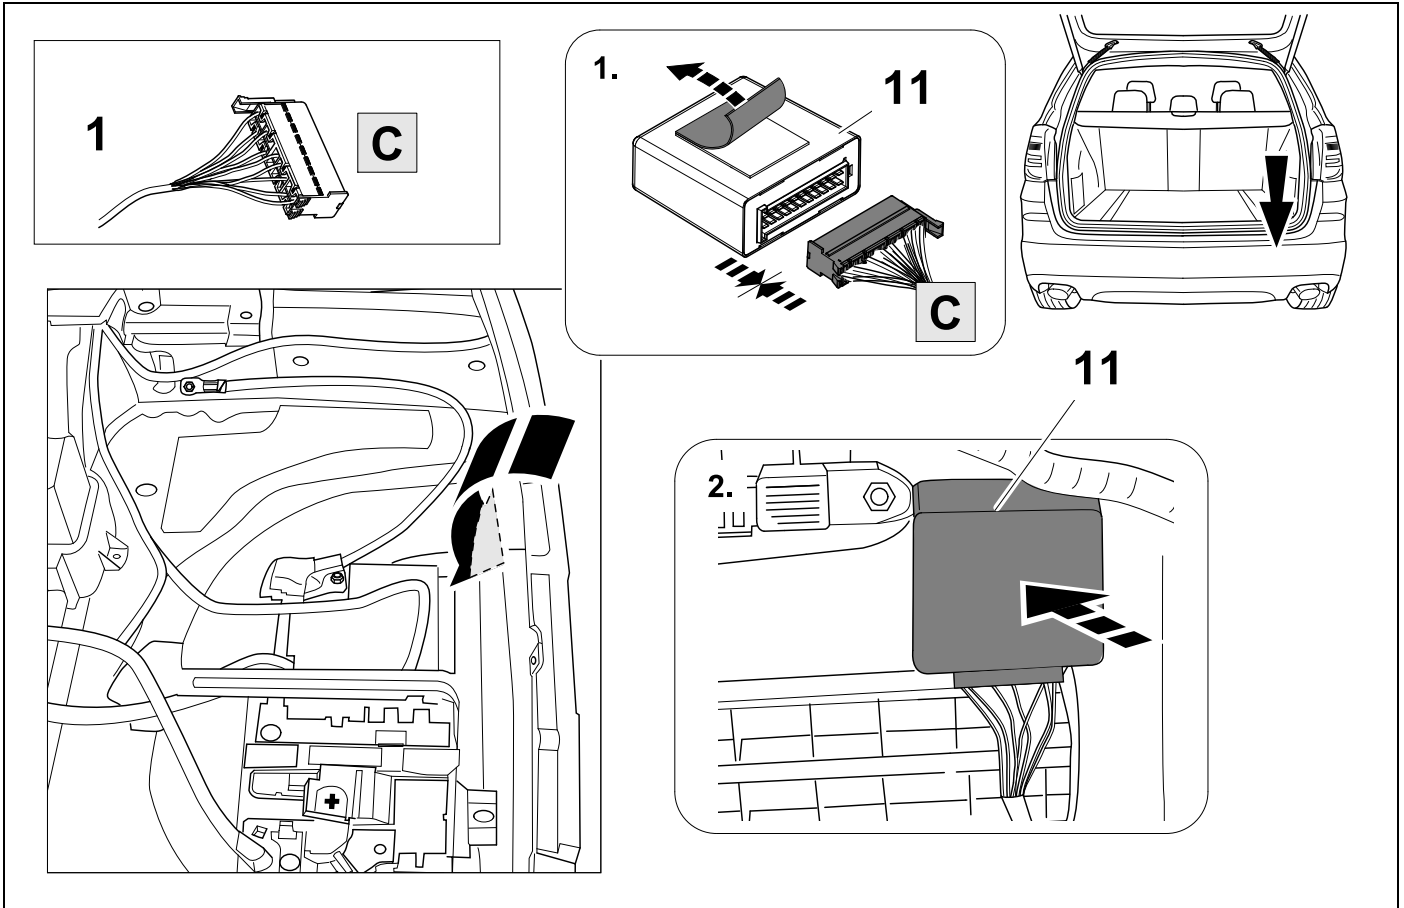


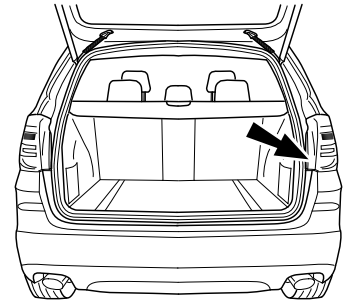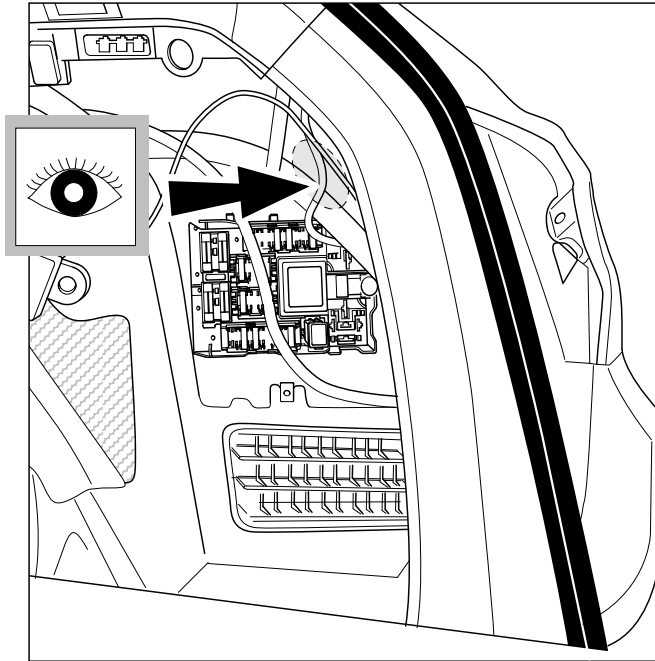

1.

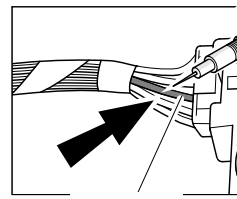

bu-bn

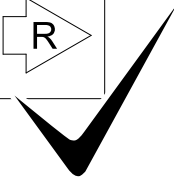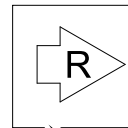 

bk-bu

D

 
2.

bu-bn




8

3.





4.

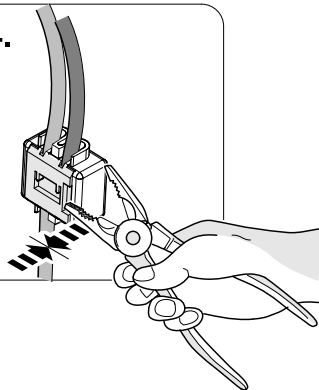


1

D



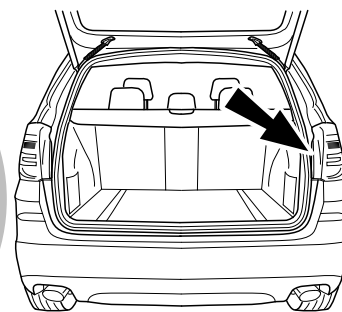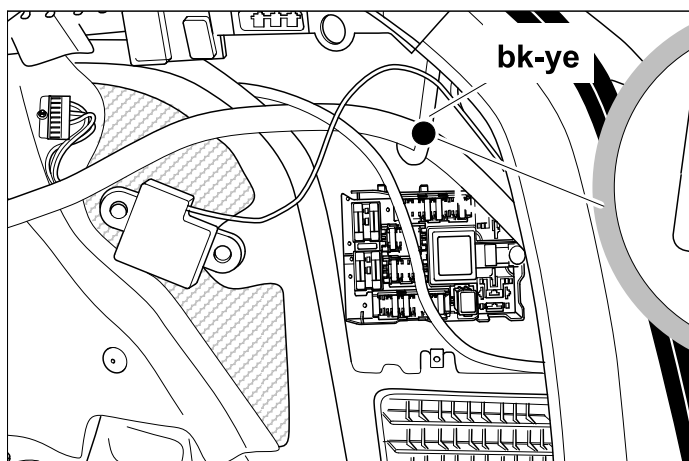


bk-ye

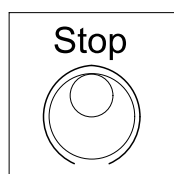E


Third brake light

1.


bk-ye

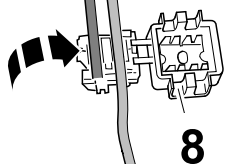


2.

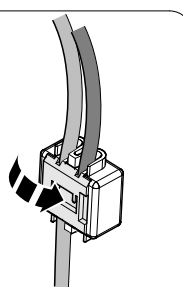






3.



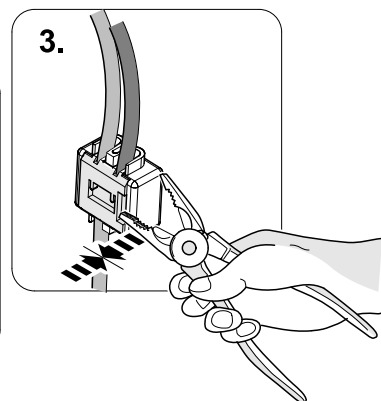


Ground!







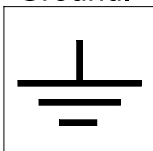


1

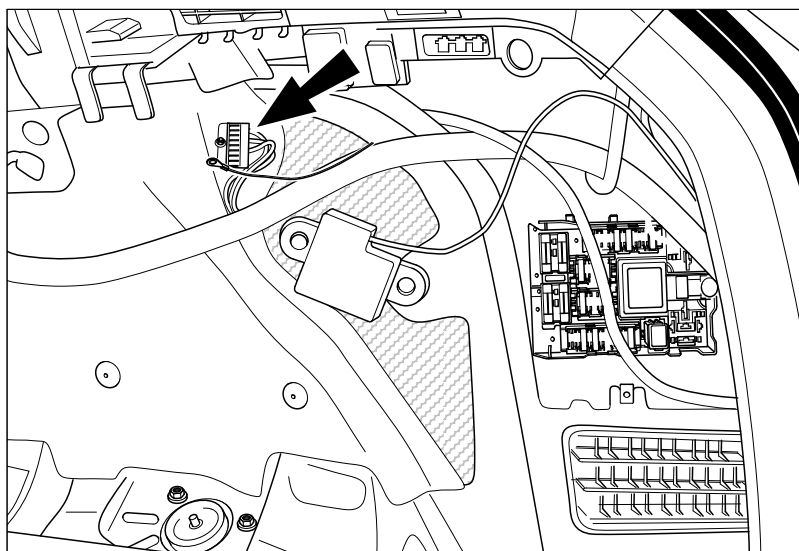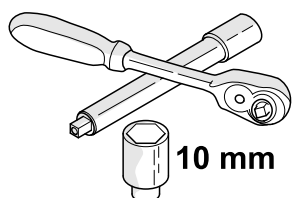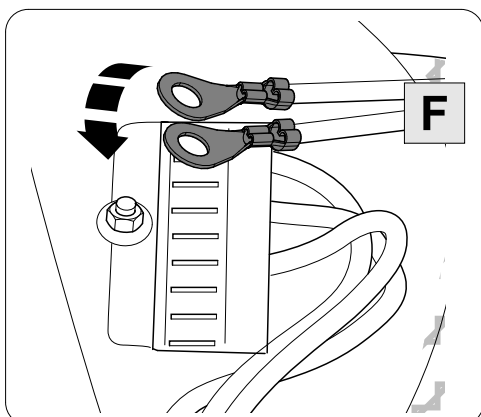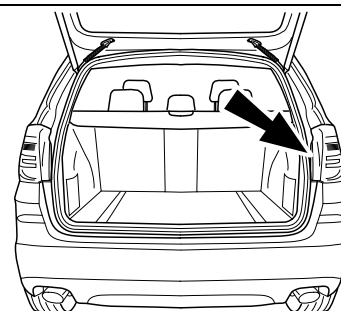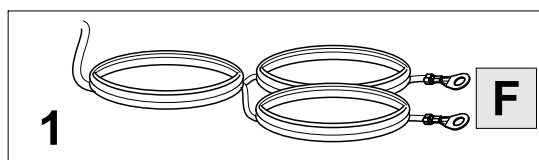

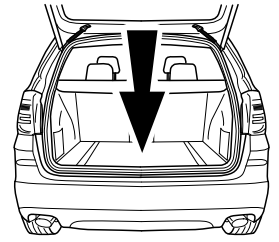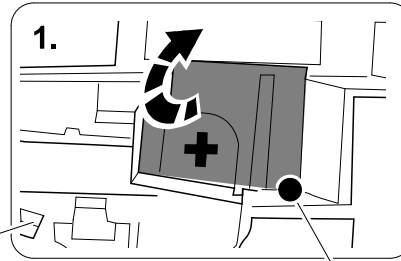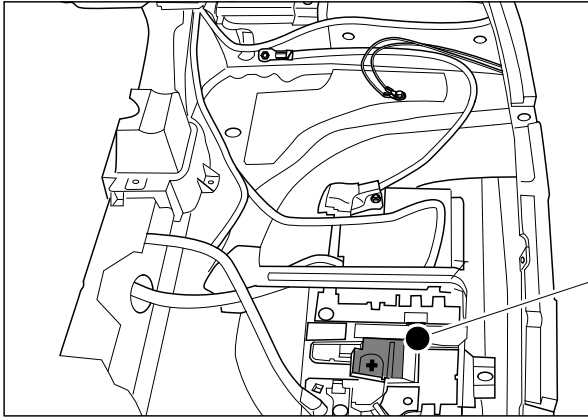


Hot all times!

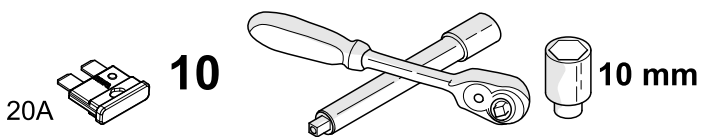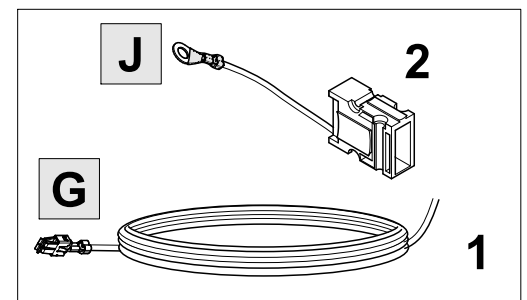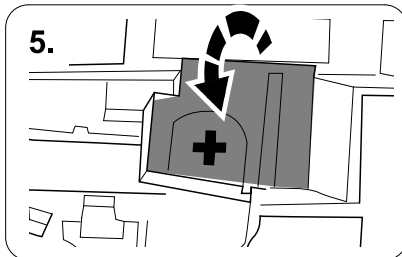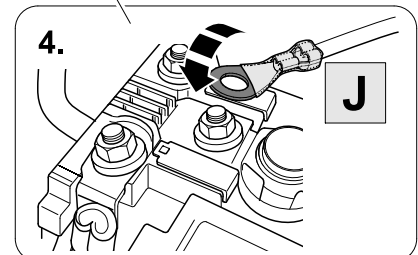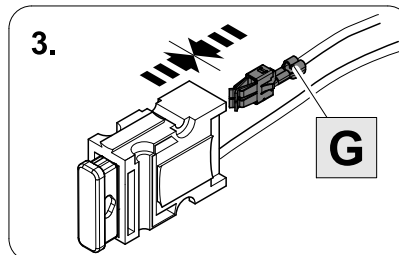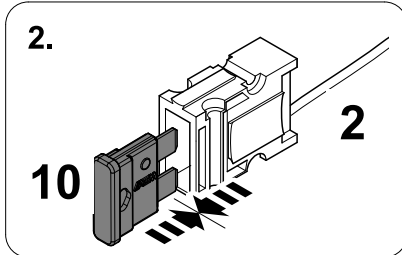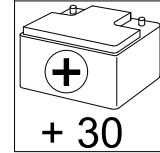




10



19

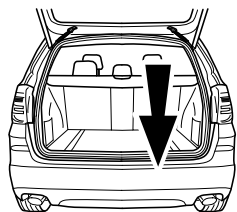

CAN Wire

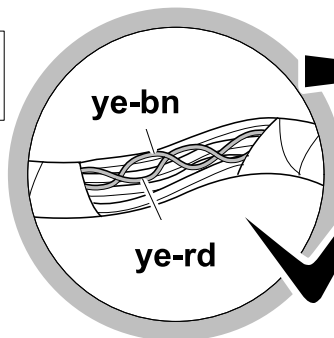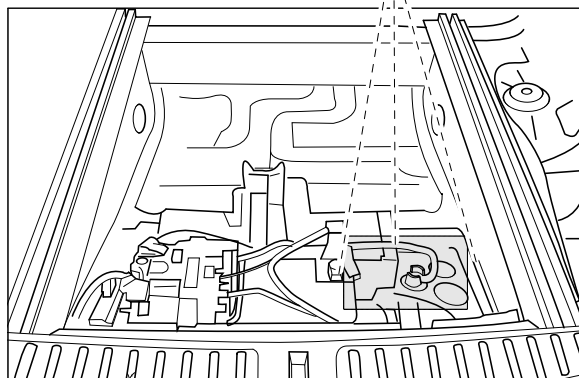 

OPTION 1

11




13

15



27

OPTION 2

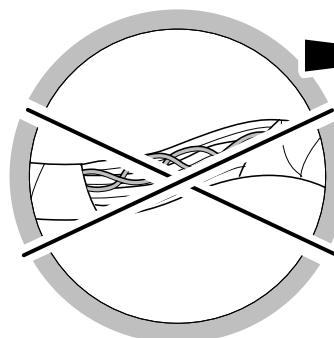

14








27

11




19

  
OPTION 1

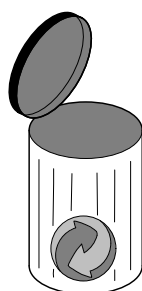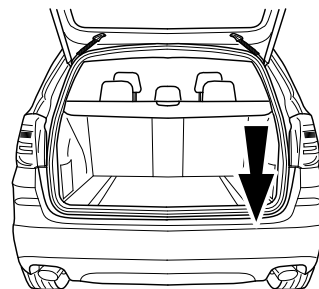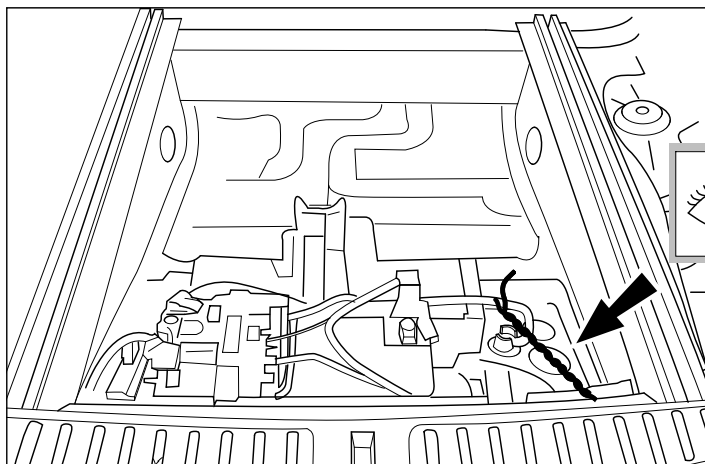ye-rd
ye

H









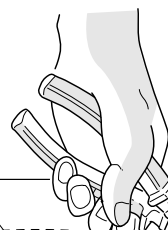



1

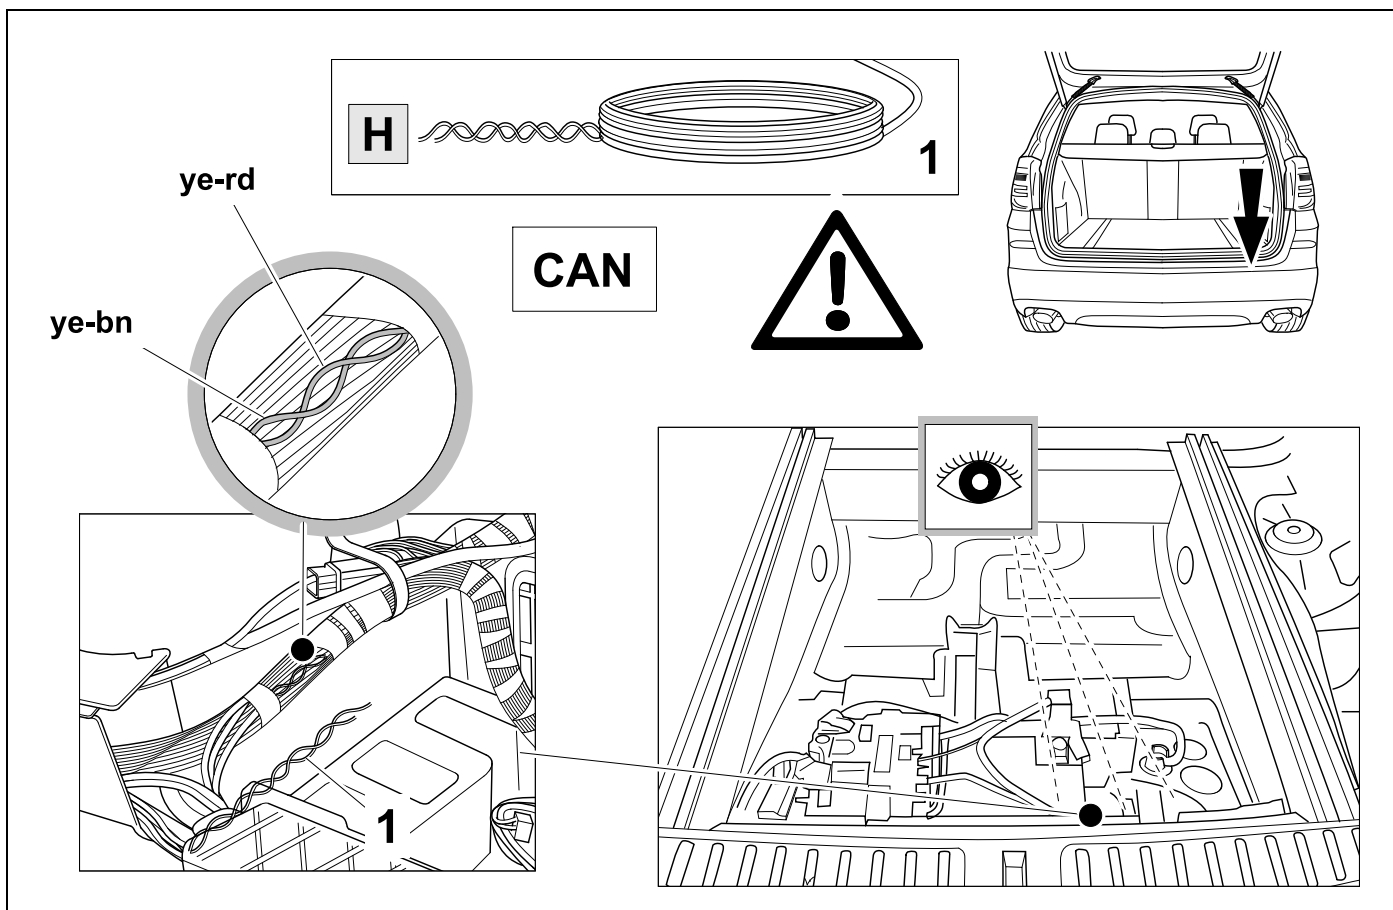







CAN

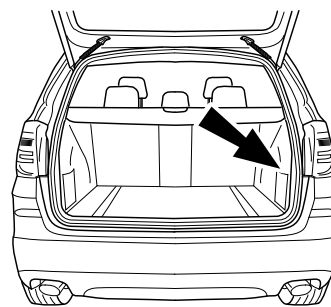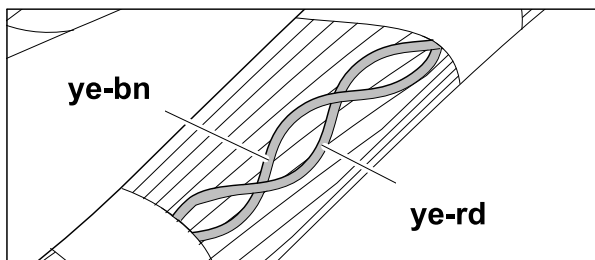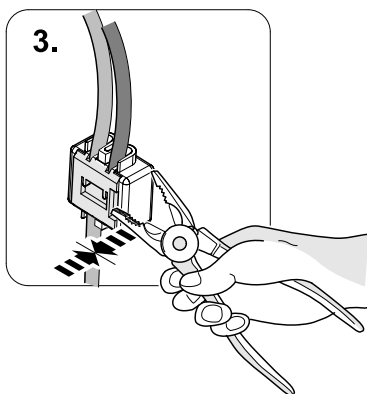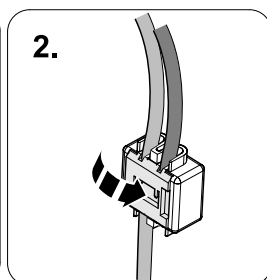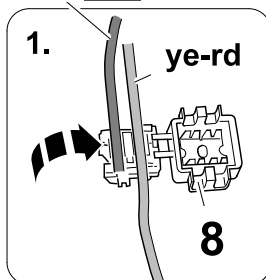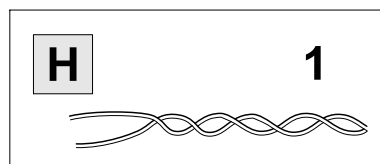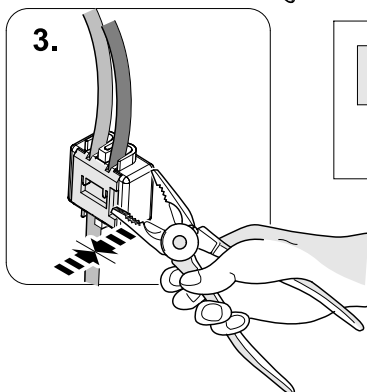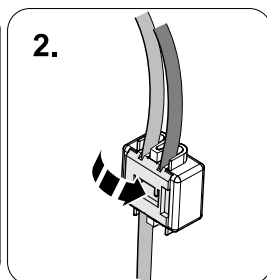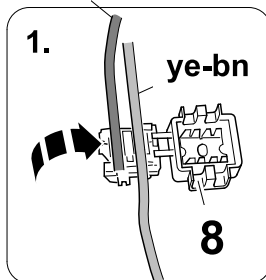
ye-rd **H**ye **H**

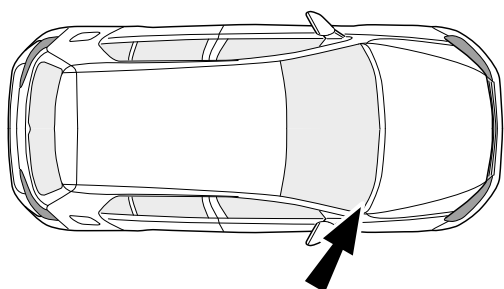


CAN

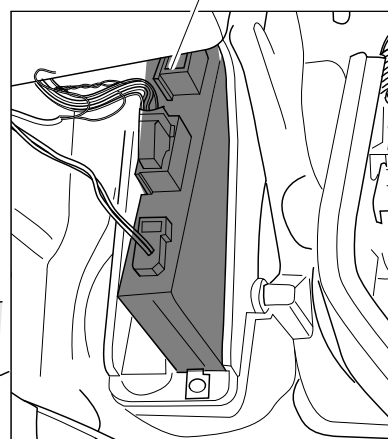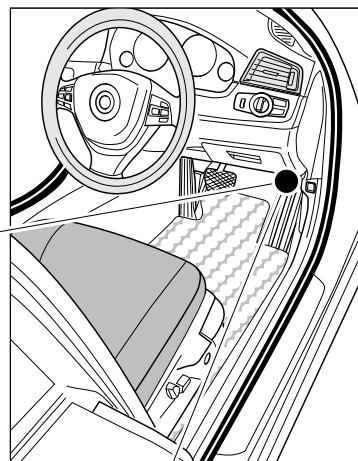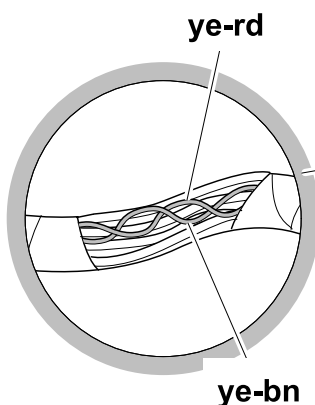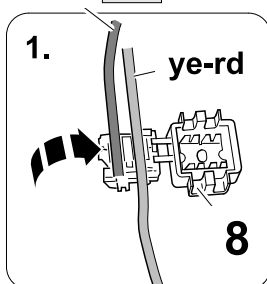ye-rd **F**


2.

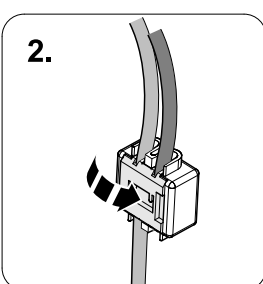


3.

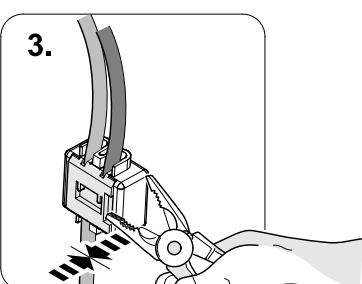


ye

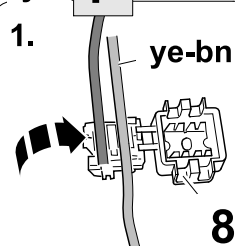F


2.

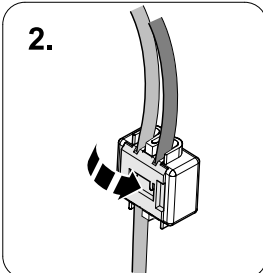

3.

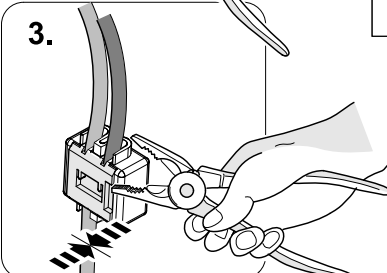


16

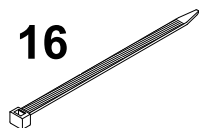


8




8

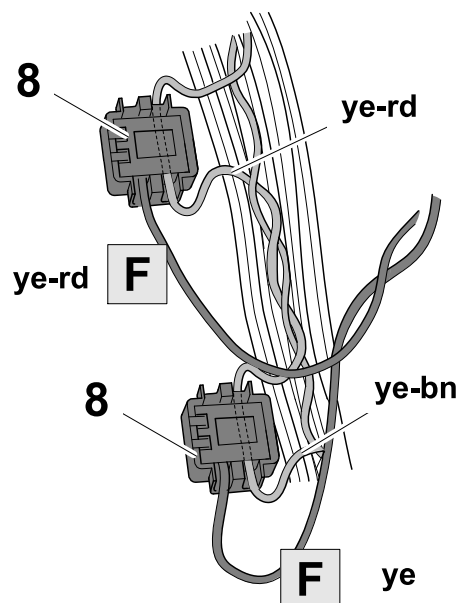

1

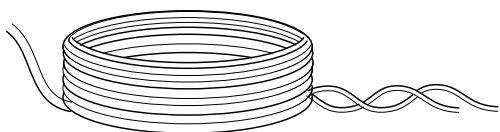**F**


15

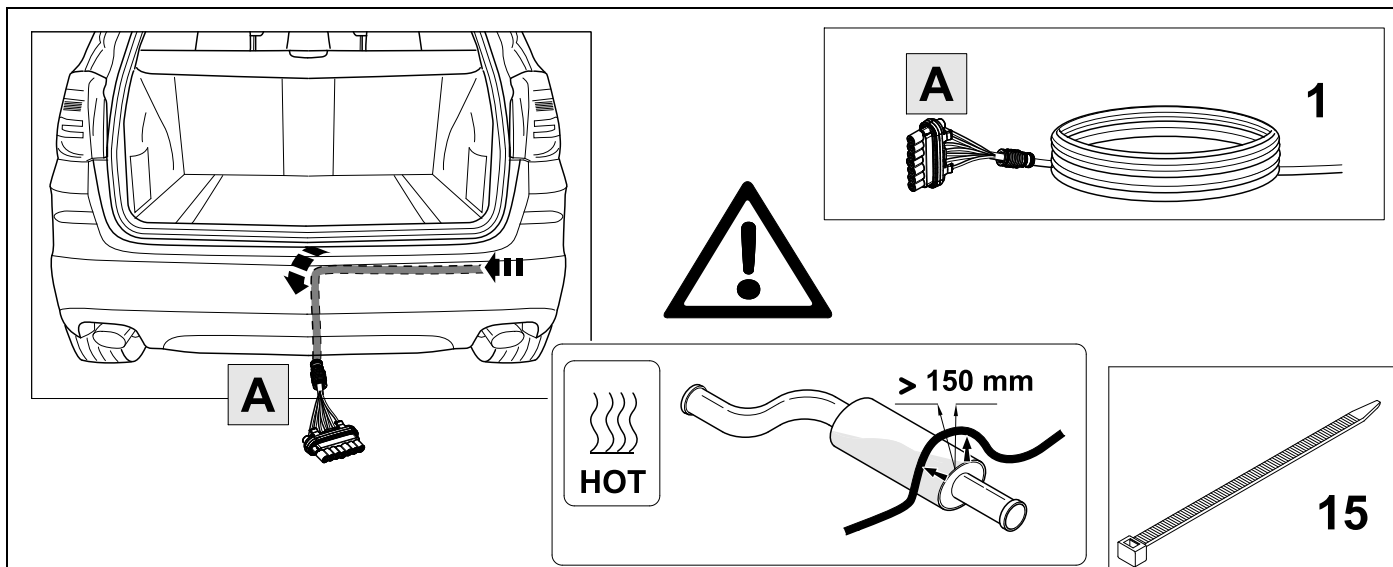


16



17

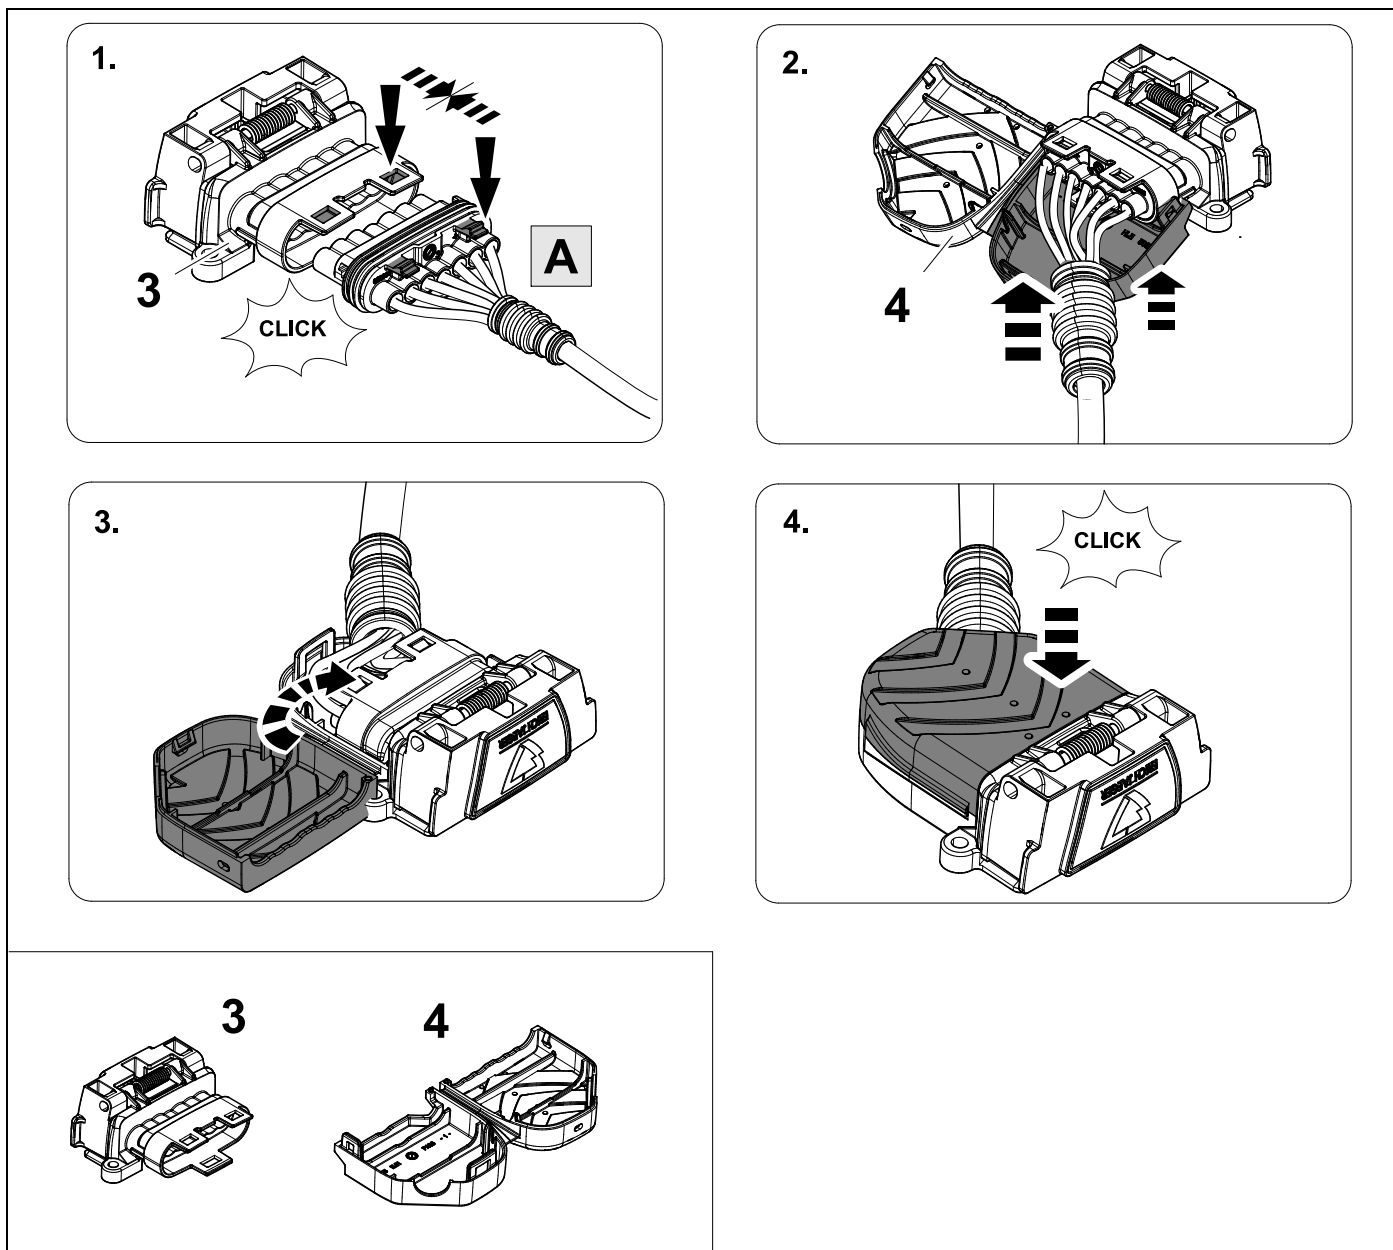

17

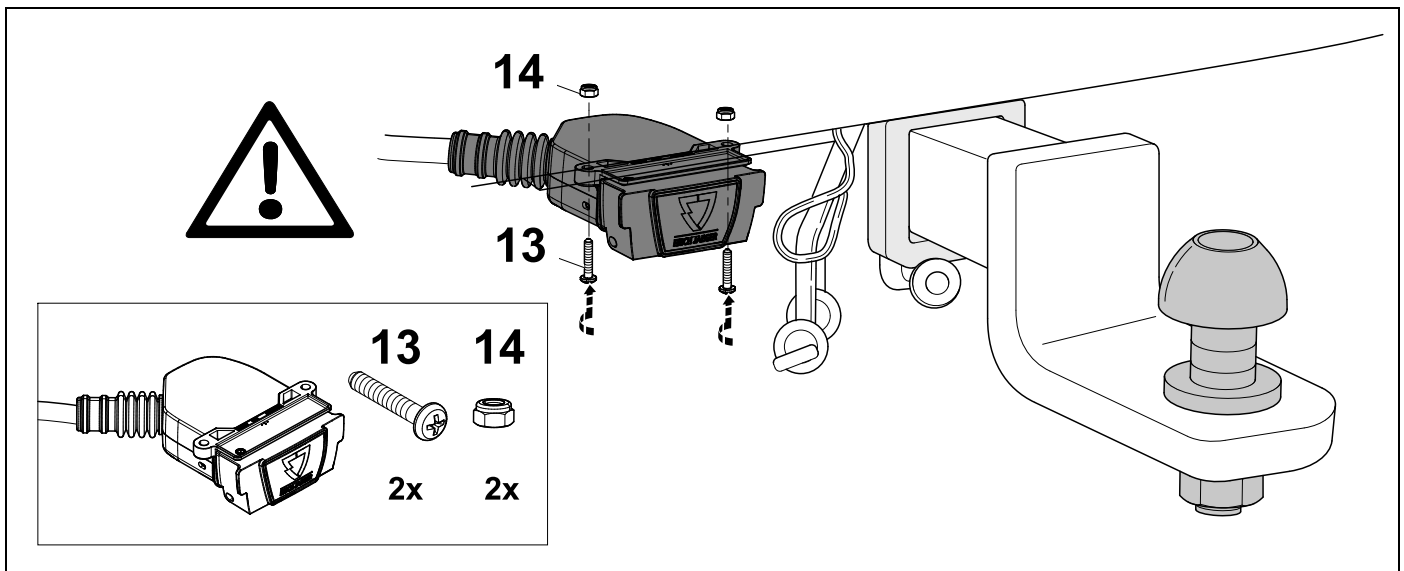

18




19


1	ye	
2	bk	
3	wh	
4	gn	
5	bu	
6	rd	
7	bn	


19	bk	wh	gy	gn	rd	bu	ye	bn	pu	or	no
	black	white	grey	green	red	blue	yellow	brown	purple	orange	not occupied

 BRAKE
CONTROLLER
PREPARED




Trailer Brake Preparation




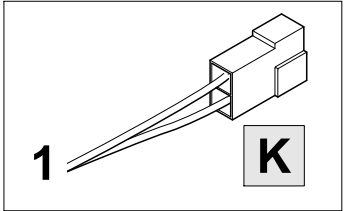


1.

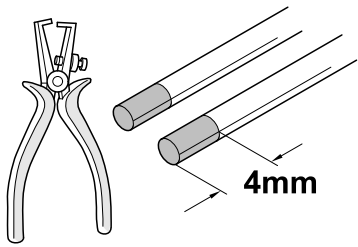


2.

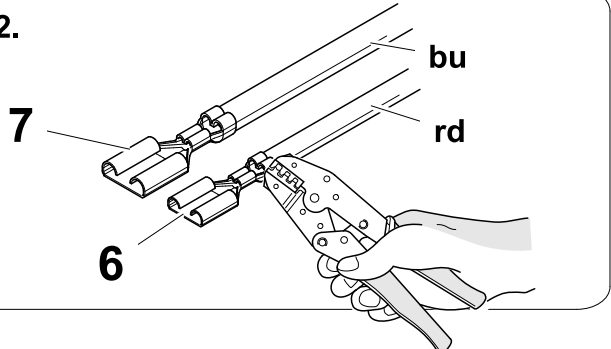

3.

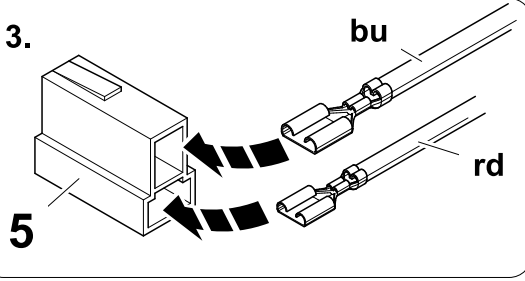

 
4.

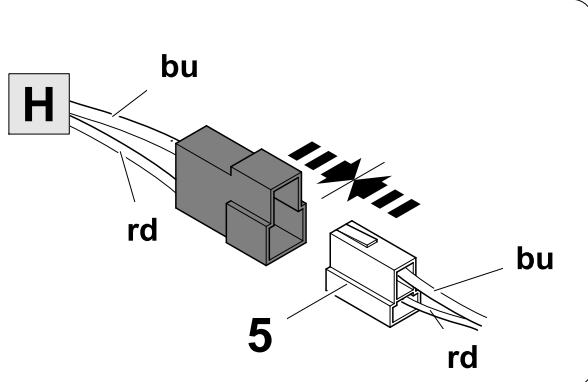
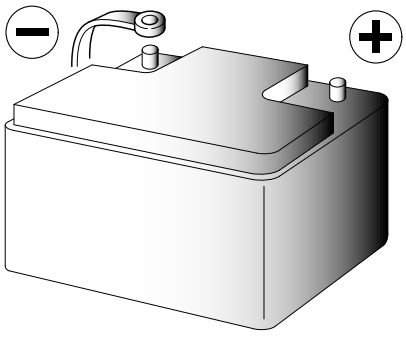





5

6

7

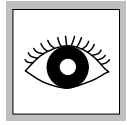



22

CHECK ALL LIGHTING FUNCTIONS



23

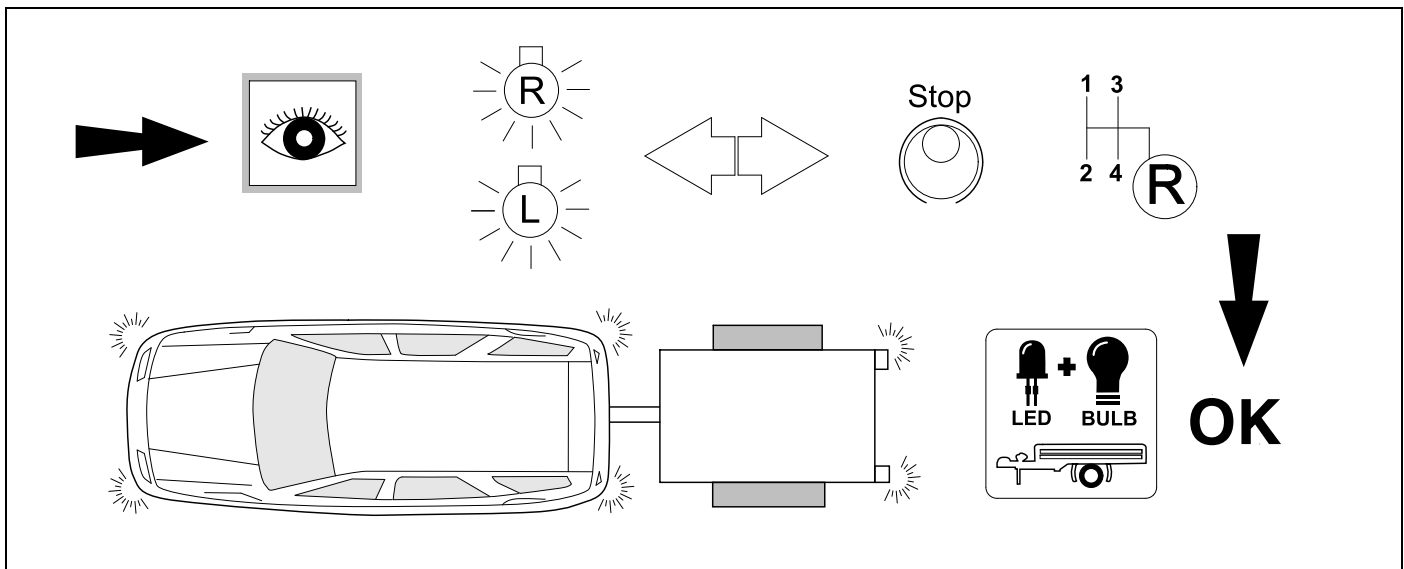
CHECK BULB OUT DETECTION

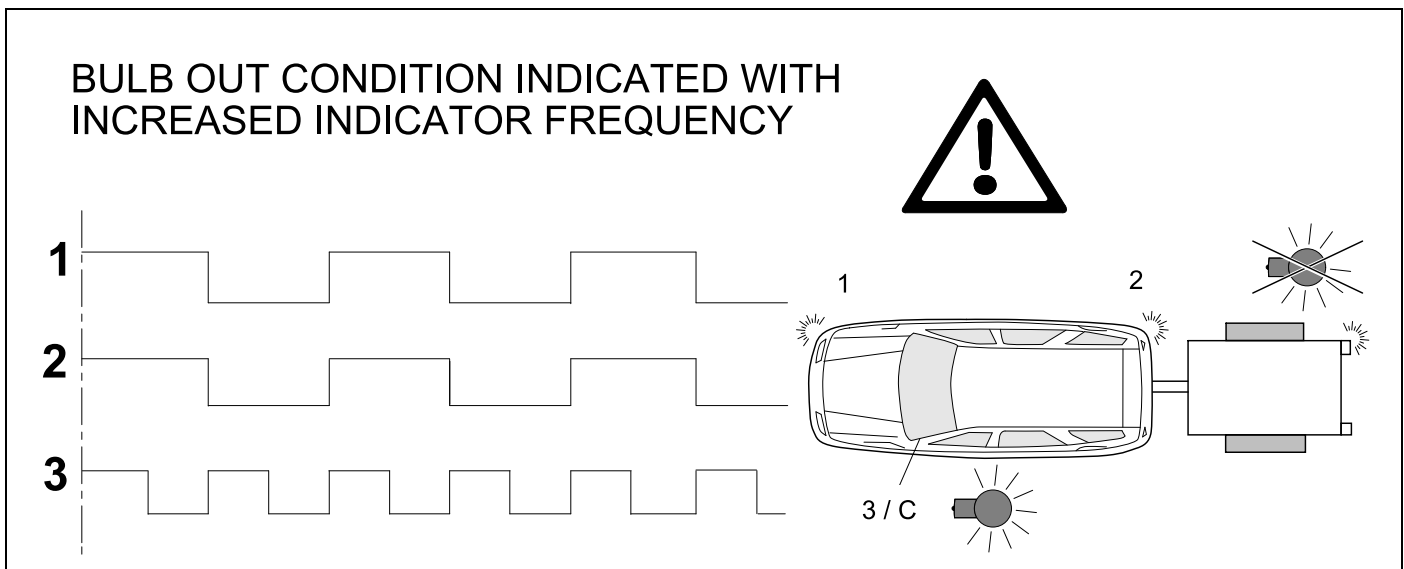


24







9

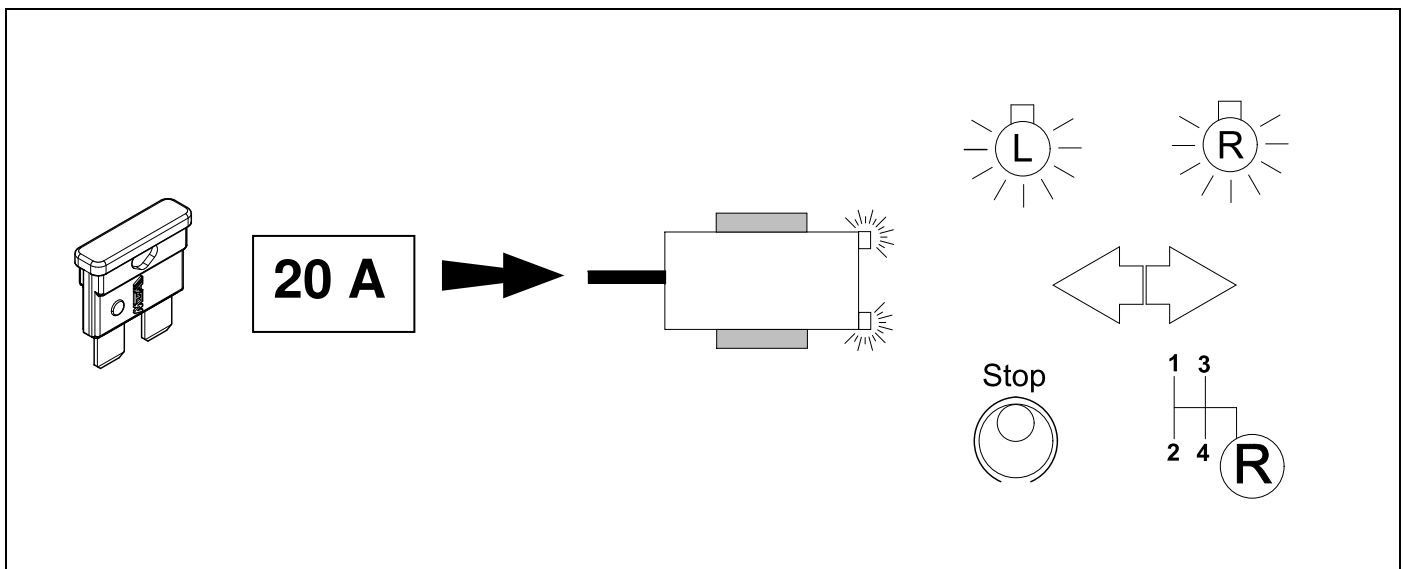

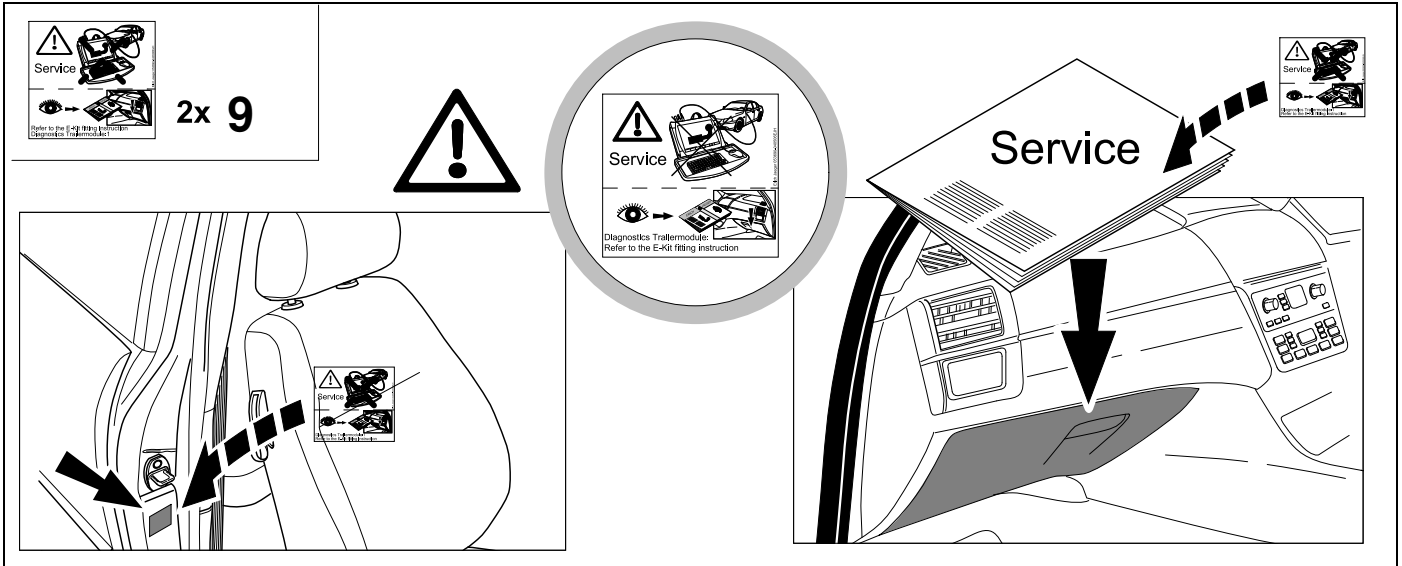



If the PDC does not automatically deactivate,
coding and initialization of the module might be required.

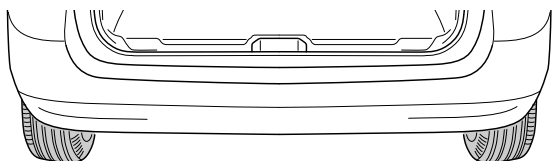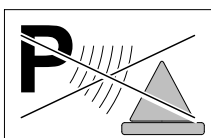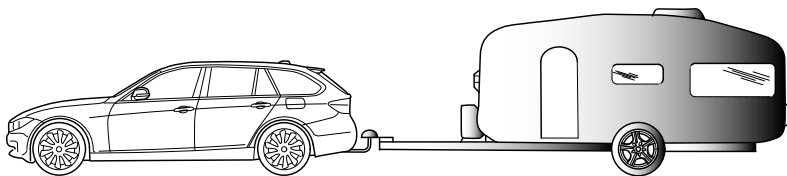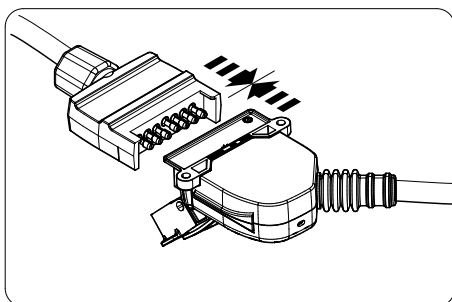




OPTION 1




No Coding

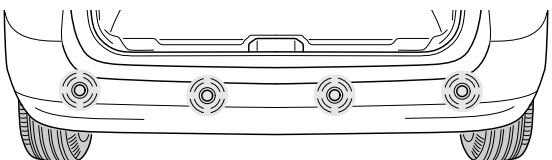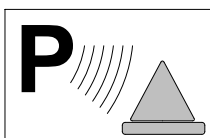


OPTION 2

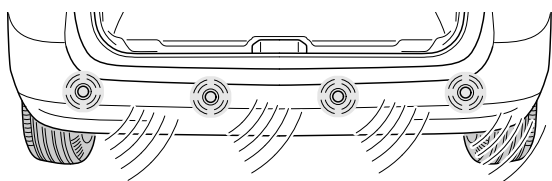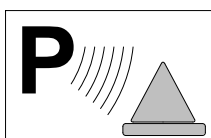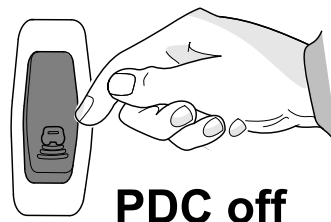


OPTION 3

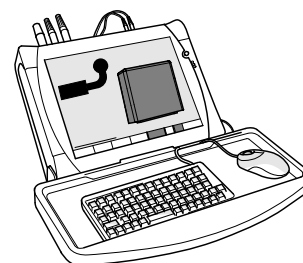

**BMW Service ISTA/P
Initialize Trailer Module**

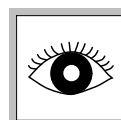

27

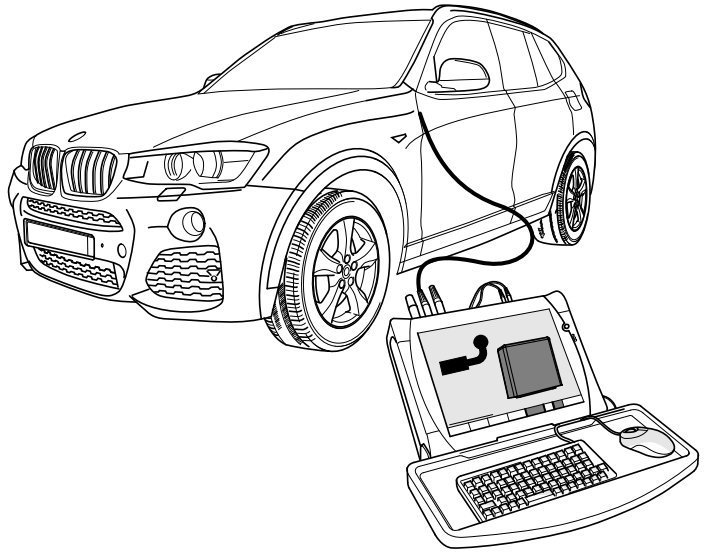

BMW Service ISTA/P Initialize Trailer Module

GB



Please effect coding as follows:

- Connect computer to vehicle
- Start ISTA/P
- Click “Modification / Upgrades”
- Scan Action plan
- Click „Coding (Ethernet)“
- Scan Action program follow-up
- Final report checking

After the effected connection, the rear park assist system will also automatically be deactivated in trailer operation!

Status LED for self-diagnosis

Operation Support

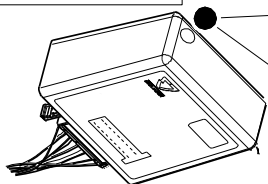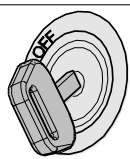





No CAN-Data =






Standby / Sleepmode



   Ignition OFF

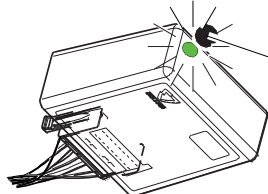

Ignition ON

 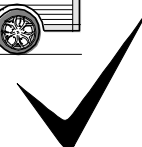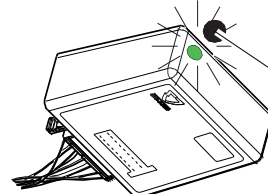





Ignition ON

Failure Support

CAN-Data Wire




 1x max. 5 min.



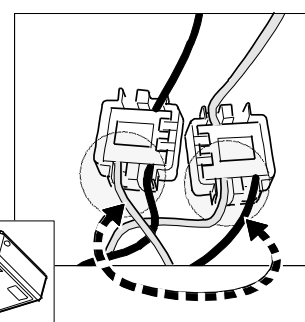
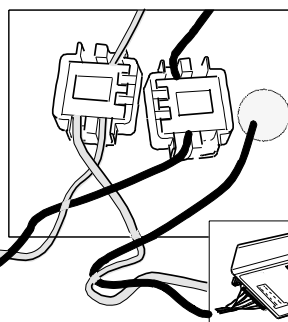

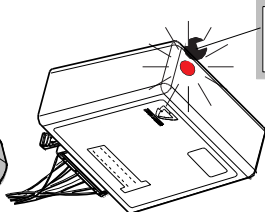



Ignition ON

 Failure indicated by the module LED glowing red for a maximum of 5 minutes. If trailer connected the tail lights will also glow indicating failure of CAN signal.



Ignition ON

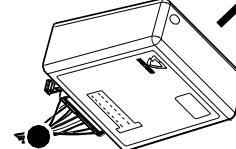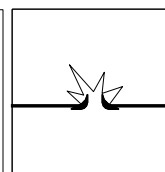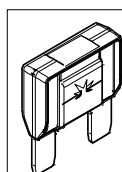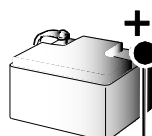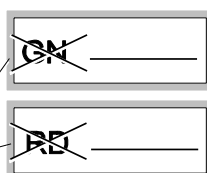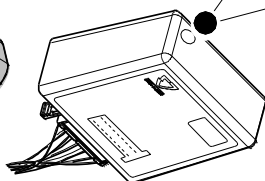

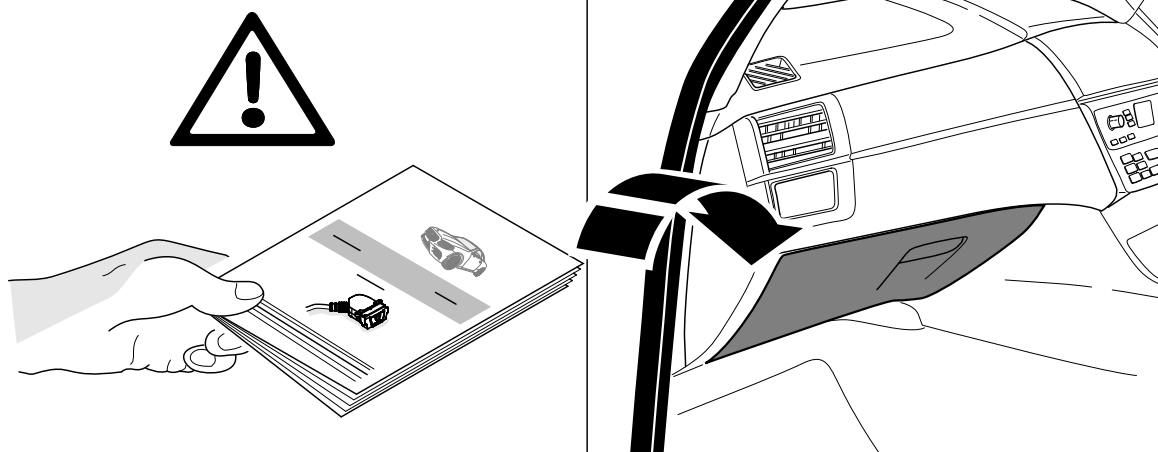

Subject to change in terms of construction, equipment and colour, and may contain errors.
The information and illustrations are non-binding.