

INSTALLATION INSTRUCTIONS

1579 - TO SUIT PEUGEOT 306 3/5 DOOR HATCH XT & XSi 7/97-4/99 XT & GTi 5/99-ON

PLEASE READ INSTRUCTIONS THROUGH BEFORE YOU BEGIN

WARNING : 1. Do not drill, cut weld or otherwise modify the towbar.

2. If you are using electric welding on a motor vehicle, always check that the vehicle is not equipped with electronic engine or instrument management equipment. Failure to do so could destroy any onboard computers. If in doubt, check with the vehicle's manufacturer.

IMPORTANT: *You must always use suitable rust prevention paint or sealer whenever a hole is drilled on any parts of vehicle.*


1. Ensure all hardware items have been included.
2. Remove spare wheel.
3. Remove three most rearward exhaust hangers and earth strap to allow muffler to hang down.
4. Remove muffler heat shield.
5. From inside of boot remove trim buttons and one 13mm bolt, fold back carpet to expose floor pan.
6. XT & GTi 5/99-on
 - a. Remove both 6mm from under vehicle fixing bumper bar to shipping hook brackets.
 - b. From centre of captive nuts on shipping hooks measure 500mm in towards centre of vehicle on bottom lip of bumper bar and mark.
 - c. This mark should be used as centre line for bumper cut out only on models 5/99-on. Refer to diagrams.
7. Hold towbar up into position aligning holes in towbar side plates with holes in sub frame of vehicle and fit bolts and spacer tubes as per diagram.
8. Position towbar so as angle irons are touching floor pan and tighten four bolts previously fitted.
9. Using holes in angle irons as a guide, drill up through floor and fit bolts and loose plates as per diagram.
10. Tighten all bolts to torque listing below.
11. Refit heat shield, earth strap, muffler, spare wheel and carpet.
12. Towbar rating sticker to be conspicuously located on inside rear end of the driver's door. (See diagram below)

RECOMMENDED ASSEMBLY TORQUE LISTING

<u>Diameter</u>	<u>Grade 4.6 Bolt</u>		<u>Grade 8.8 Bolt</u>	
	Nm		Nm	
M6	3.5		9.5	
M8	8.6		21.7	
M10	16.9		43.4	
M12	29.8		77.3	
M16	74.0		189.8	


FOR TOWING PURPOSES ONLY

For towing capacity details please refer to vehicle owner's manual or to the manufacturer. Overloading can void your warranties.

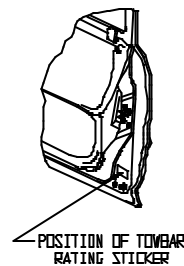


PLEASE NOTE: You must remove the lug unless you are actually towing if it obscures your number plate. Failure to do so may result in a fine.

1579 - TO SUIT PEUGEOT 306 3/5 DOOR HATCH XT & XSi 7/97-4/99 XT & GTi 5/99-ON

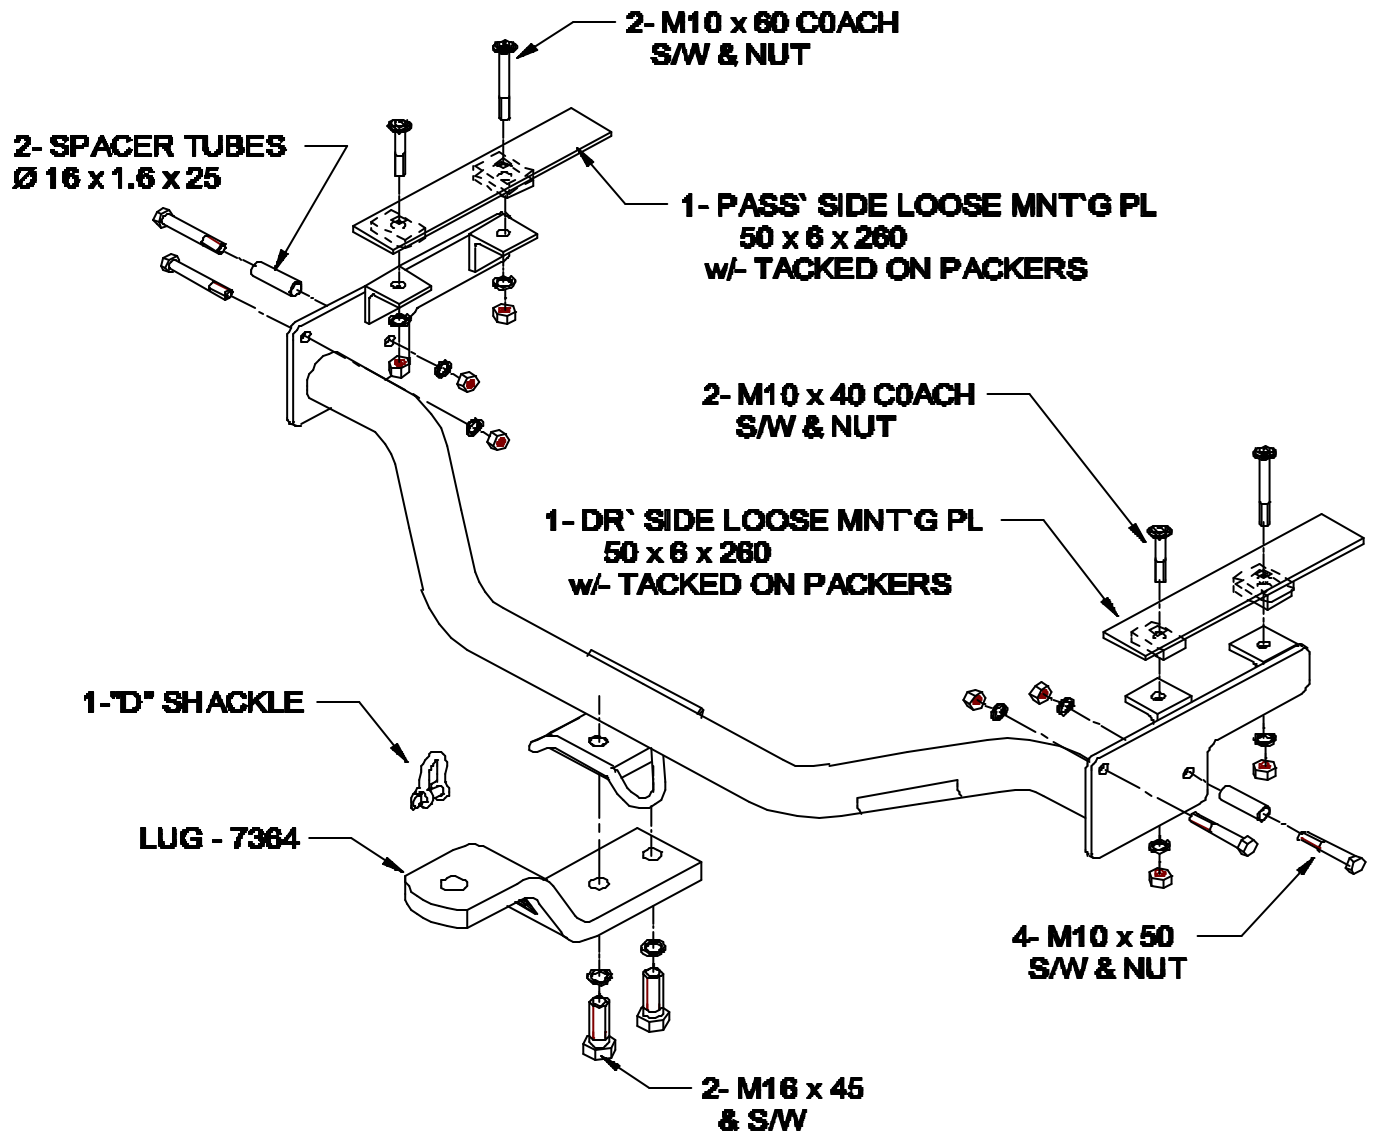

XT & XSi 7/97 TO 4/99 BUMPER CUT OUT

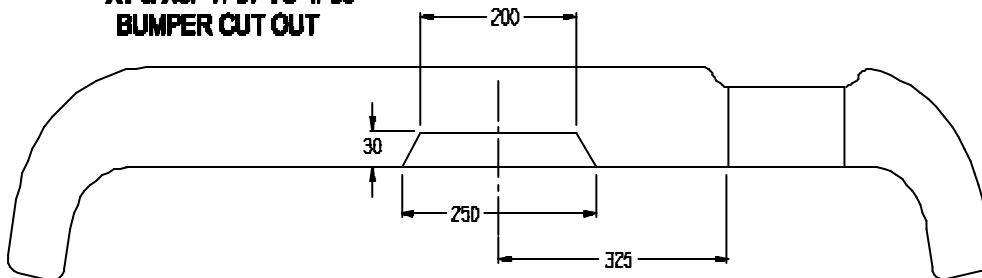

XT & GTi 5/99 BUMPER CUT OUT

