

**HAYMAN REESE**  
**PART No: 02937RLW**  
**HONDA CIVIC HATCH 06-2012 ON**

## INSTALLATION INSTRUCTIONS

PLEASE ENSURE THAT ALL INSTRUCTIONS ARE UNDERSTOOD PRIOR TO FITMENT  
PLACE THESE INSTRUCTIONS IN THE VEHICLE'S GLOVEBOX AFTER INSTALLATION IS COMPLETE



Installation Time: Approx 60 Mins

**Towbar Installation Instructions**

**Towbar capacity**

**HONDA CIVIC HATCH 06-2012 On**

**Part Number 02937RLW**

**Max Towing Braked 1400 kg**

**Max Static Ball Load 140 kg**

Hayman Reese (Cequent)  
PO Box 4050, Dandenong South VIC 3164  
Phone 1800 812 017 Email [info@haymanreese.com.au](mailto:info@haymanreese.com.au)

**HAYMAN REESE**  
**PART No: 02937RLW**  
**HONDA CIVIC HATCH 06-2012 ON**

**INSTALLATION INSTRUCTIONS**

PLEASE ENSURE THAT ALL INSTRUCTIONS ARE UNDERSTOOD PRIOR TO FITMENT  
PLACE THESE INSTRUCTIONS IN THE VEHICLE'S GLOVEBOX AFTER INSTALLATION IS COMPLETE

**Warning:**

1. Do not, drill, cut, weld or otherwise modify the towbar.
2. If you are using electric welding on a motor vehicle, **always** check that the vehicle is not equipped with electronic engine or instrument management equipment. Failure to do so could **destroy** any onboard computers. If in doubt, check with the vehicle's manufacturer.

**General:**

1. Ensure all hardware items have been included refer to assembly diagram.
2. It is recommended that the instructions are read through and completely understood before making any attempt to fit this product.
3. Be wary of any changes to vehicle designs or other accessories that may conflict with the installation of this product.
4. Before drilling ensure that the area is clear of fuel, electrical & other components.
5. All holes drilled into the body panels shall have all burrs & swarf removed then coated with a suitable rust preventative paint.
6. The high tensile fasteners supplied with this product were used to achieve the specified rating. If replacement is required ensure that fasteners of the same rating & quality are used. Contact an authorised **Hayman Reese** dealer if further information is required.
7. Ensure that all hardware is fastened to torque list below check fasteners on regular basis.
8. Towbar load rating sticker provided with this product shall be conspicuously located on inside rear end of the driver's door. **(See diagram below).**
9. Hayman Reese recommends that you check your tow ball to ensure that it complies with the Australian standards **AS 4177.2**.
10. **PLEASE NOTE:** It is advised to remove your lug or tbn when not actually towing so as to produce a clear view of the vehicle's registration plate if obscured, and to also provide maximum available departure angle.
11. Pull Pin must be fit in down position.


**Tow bar Maintenance and Care.**

Hayman Reese recommends that bolt torque's, as listed below, are routinely and regularly inspected and checked for correct tension. Replace any worn or defective parts.

We recommend to remove Tow Ball Mounts (TBM's, tongues or lugs) when not being used for any considerable length of time.

So as to avoid injury, when not towing it is suggested that the tongue, Pull Pin and R-clip are removed then stored in a safe, clean and dry place, away from excessive moisture.

Hitch Pull Pins and spring "R" clips are regularly checked for proper installation. Replace any worn or defective parts.

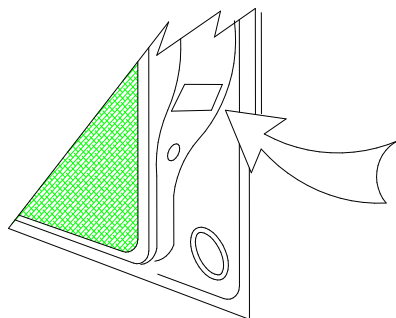

**Place load rating sticker  
inside driver's door here**

**RECOMMENDED ASSEMBLY TORQUE  
LISTING**

**Diameter Grade 8.8 Bolt**

M6	9.5 Nm
M8	21.7 Nm
M10	43.4 Nm
M12	77.3 Nm
M14	146 Nm
M16	189.8 Nm

**FOR TOWING PURPOSES ONLY**

**For towing capacity details please refer to vehicle owner's manual or to the manufacturer. Overloading can void your warranties.**


# HAYMAN REESE

PART No: 02937RLW


HONDA CIVIC HATCH 06-2012 ON

## INSTALLATION INSTRUCTIONS

PLEASE ENSURE THAT ALL INSTRUCTIONS ARE UNDERSTOOD PRIOR TO FITMENT  
PLACE THESE INSTRUCTIONS IN THE VEHICLE'S GLOVEBOX AFTER INSTALLATION IS COMPLETE

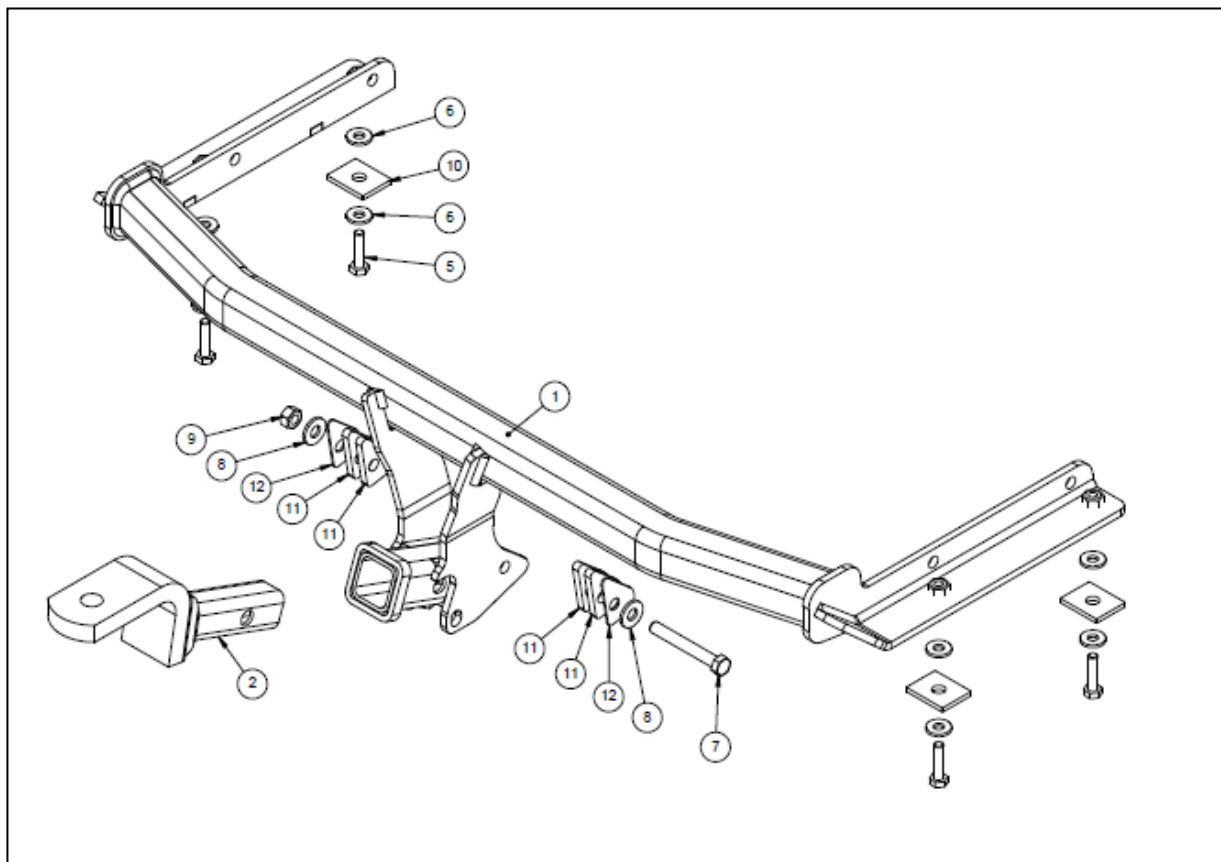

QTY.	DESCRIPTION	ITEM NO.
1	WELDED ASSEMBLY	1
1	TBM	2
4	BOLT M10 - 1.5 x 40mm	3
8	WSHR FT M10 x 25.4x3	4
1	BOLT M12 - 1.25 x 90	5
2	WASHER M12 x 28.8x3mm	6
1	M12 x 1.25 HEX NUT PC8	7
4	SPACER PLATE	8
4	HOOK PLATE	9
2	2mm SPACER TOW HOOK	10

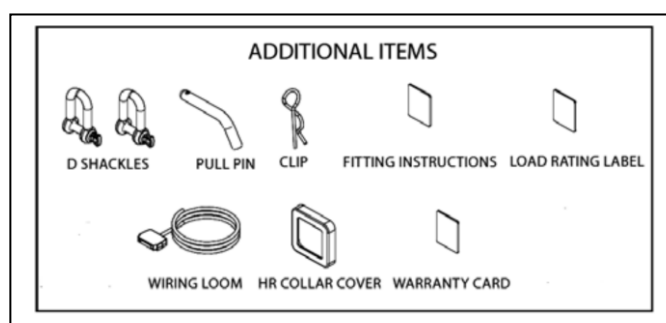


# HAYMAN REESE

PART No: 02937RLW

HONDA CIVIC HATCH 06-2012 ON


## INSTALLATION INSTRUCTIONS

PLEASE ENSURE THAT ALL INSTRUCTIONS ARE UNDERSTOOD PRIOR TO FITMENT  
PLACE THESE INSTRUCTIONS IN THE VEHICLE'S GLOVEBOX AFTER INSTALLATION IS COMPLETE

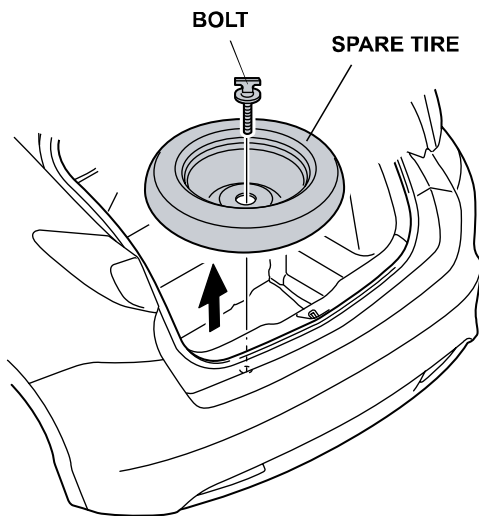


### 1. Remove spare tyre:

Remove trunk rear trim panel;  
Remove inner lid and then remove inner pocket fold the right rear seat;  
Remove the right trunk side trim panel  
Remove speaker (if fitted).

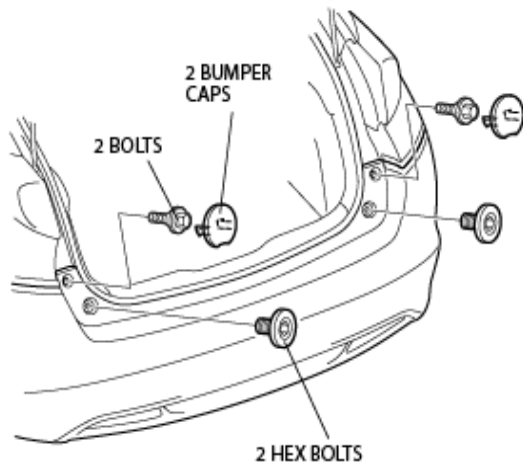

### 2. From outside of vehicle:

Remove bumper caps and bolts;  
Remove short and long clips from under bumper.

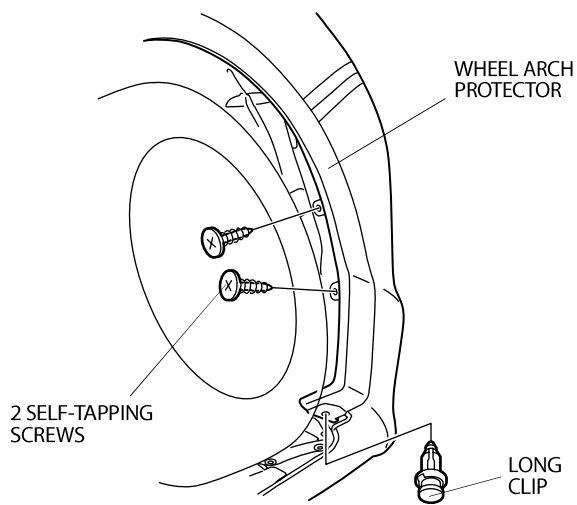


### 3. From inside of Wheel Arch:

Remove self – taped screws and long clips on LHS of vehicle, release the hook and clips;  
Repeat all for RHS of vehicle.

**HAYMAN REESE**  
**PART No: 02937RLW**  
**HONDA CIVIC HATCH 06-2012 ON**

**INSTALLATION INSTRUCTIONS**


PLEASE ENSURE THAT ALL INSTRUCTIONS ARE UNDERSTOOD PRIOR TO FITMENT  
PLACE THESE INSTRUCTIONS IN THE VEHICLE'S GLOVEBOX AFTER INSTALLATION IS COMPLETE

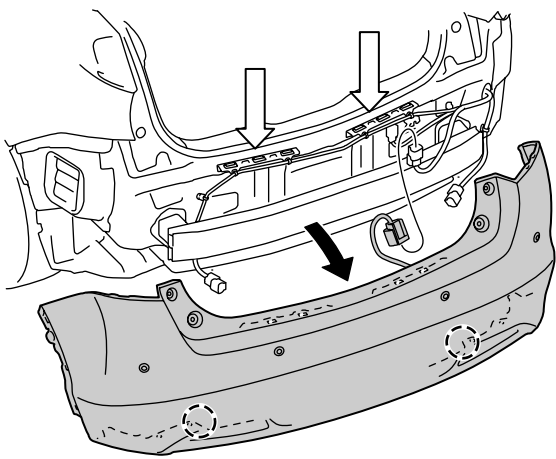

**4. Release the bumper**

Retaining tabs and remove bumper from vehicle, place on stand.

Remove grommet on RHS rear quarter panel and discard

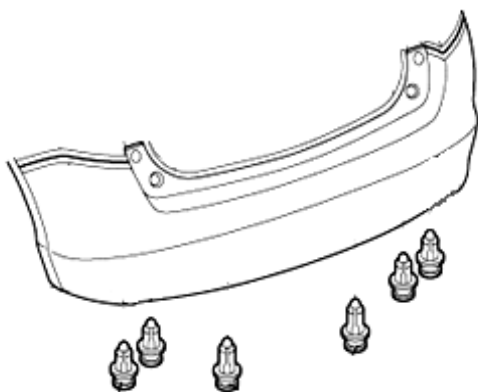

**5. Remove of bumper impact beam**

Remove impact beam bolts and remove impact beam from vehicle

**6.** Assembly Towbar to vehicle, loosely insert the fasteners. Refer to page 3 diagram.

**7.** Tighten all fasteners to the torque specifications listed on **Page 2**.

**8.** Refer to bumper cut out pictures, to cut bumper and tray.  
Re-install at parts to vehicle in reverse order of removal.

# HAYMAN REESE


PART No: 02937RLW

HONDA CIVIC HATCH 06 -2012 ON

## INSTALLATION INSTRUCTIONS


PLEASE ENSURE THAT ALL INSTRUCTIONS ARE UNDERSTOOD PRIOR TO FITMENT  
PLACE THESE INSTRUCTIONS IN THE VEHICLE'S GLOVEBOX AFTER INSTALLATION IS

COMPLETE

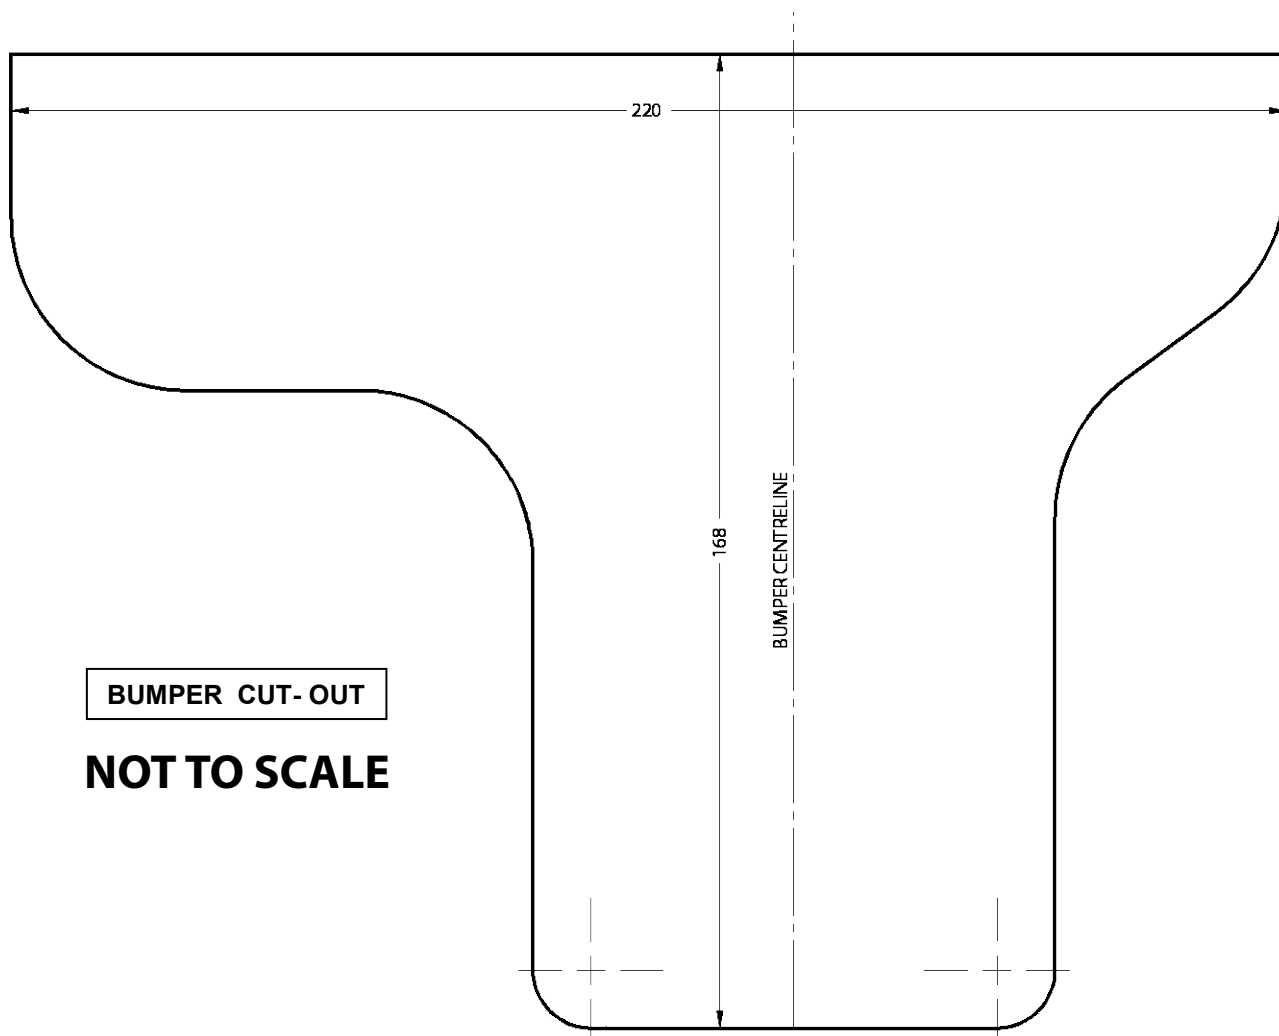

BUMPER CUT- OUT

**NOT TO SCALE**

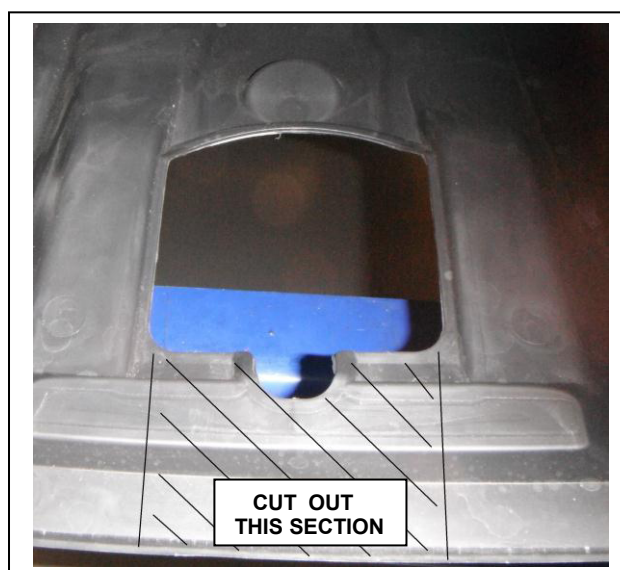

UNDER-SIDE COVER TRAY

CUT OUT  
THIS SECTION

**HAYMAN REESE**  
**PART No: 100822-WL**  
**HONDA CIVIC HATCH MY12**

**INSTALLATION INSTRUCTIONS**

PLEASE ENSURE THAT INSTRUCTIONS ARE UNDERSTOOD PRIOR TO FITMENT

**Wiring Loom Installation Instructions**

**HONDA CIVIC HATCH MY12**

**Part No: 100822-WL**

**Tail Harness Length Required: 1200mm**

**Wiring Loom Installation Time: Approx. 30 minutes**

Issue Date 06-09-12

Page 1

Part No: 100822-WL

Hayman Reese (Cequent)  
PO Box 4050, Dandenong South VIC 3164  
Phone 1800 812 017 Email [info@haymanreese.com.au](mailto:info@haymanreese.com.au)

[www.haymanreese.com.au](http://www.haymanreese.com.au)





**HAYMAN REESE**  
**PART No: 100822-WL**  
**HONDA CIVIC HATCH MY12**


## INSTALLATION INSTRUCTIONS

PLEASE ENSURE THAT INSTRUCTIONS ARE UNDERSTOOD PRIOR TO FITMENT


1. Gain access to the luggage compartment and fold down the rear passenger seats (1).
2. Remove the floor carpet (2).



3. Remove the spare wheel (1) by removing the spare wheel fastener (2).

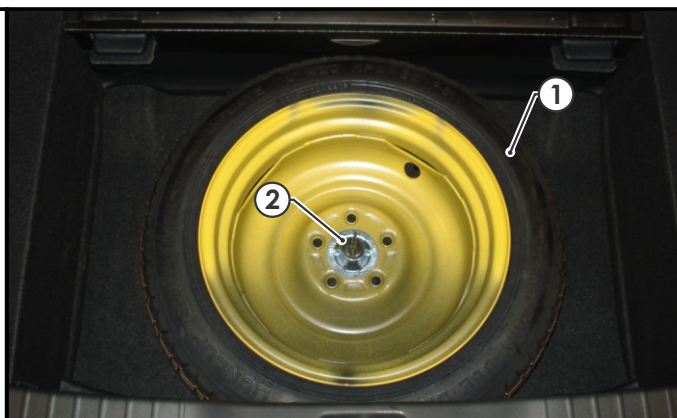

4. Remove the luggage compartment rear trim (1) by pulling the upwards.

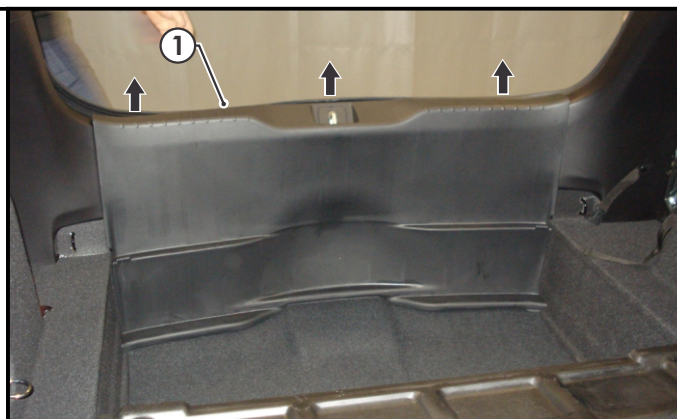

Issue Date 06-09-12

Page 2

Part No: 100822-WL

Hayman Reese (Cequent)  
PO Box 4050, Dandenong South VIC 3164  
Phone 1800 812 017 Email [info@haymanreese.com.au](mailto:info@haymanreese.com.au)

[www.haymanreese.com.au](http://www.haymanreese.com.au)






**HAYMAN REESE**  
**PART No: 100822-WL**  
**HONDA CIVIC HATCH MY12**


## INSTALLATION INSTRUCTIONS

PLEASE ENSURE THAT INSTRUCTIONS ARE UNDERSTOOD PRIOR TO FITMENT


5. Remove the centre tray cover (1).

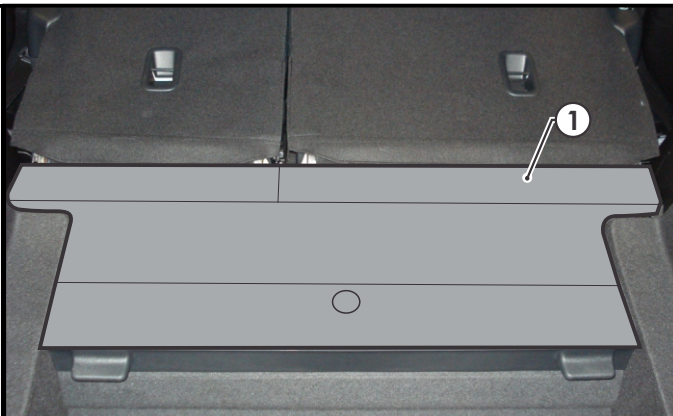

6. Remove the centre tray (1).  
7. In the wheel well below the centre divider, open the fastener covers (2) on the LHS & RHS and remove the two fasteners from underneath (3).

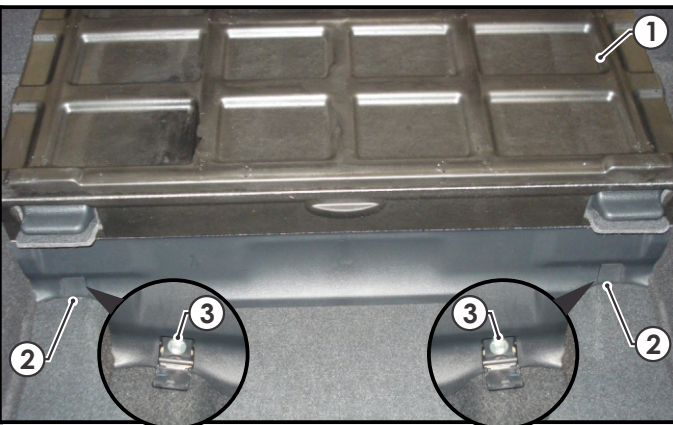

8. Remove the centre divider (1) by removing the two fasteners (2).

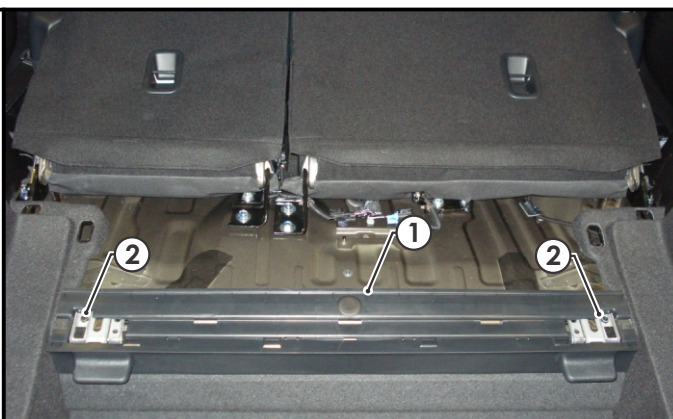

Issue Date 06-09-12

Page 3

Part No: 100822-WL

Hayman Reese (Cequent)  
PO Box 4050, Dandenong South VIC 3164  
Phone 1800 812 017 Email [info@haymanreese.com.au](mailto:info@haymanreese.com.au)

[www.haymanreese.com.au](http://www.haymanreese.com.au)




**HAYMAN REESE**  
**PART No: 100822-WL**  
**HONDA CIVIC HATCH MY12**

## INSTALLATION INSTRUCTIONS

PLEASE ENSURE THAT INSTRUCTIONS ARE UNDERSTOOD PRIOR TO FITMENT

9. Carefully dislodge the back section of the RHS luggage compartment rear trim (1).
10. From behind the trim, disconnect the RHS luggage trim light connector (2).

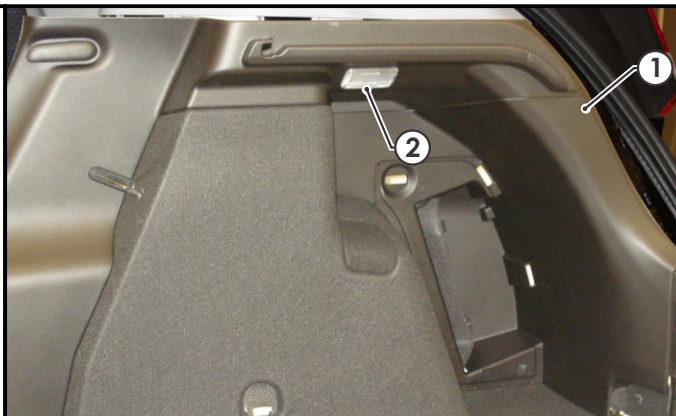

11. Dislodge the RHS door trim (1) along with the front section of the RHS luggage compartment trim (2) and then remove the luggage compartment trim (2).



12. Carefully dislodge the back section of the LHS luggage compartment rear trim (1).



Issue Date 06-09-12

Page 4

Part No: 100822-WL

Hayman Reese (Cequent)  
PO Box 4050, Dandenong South VIC 3164  
Phone 1800 812 017 Email [info@haymanreese.com.au](mailto:info@haymanreese.com.au)

[www.haymanreese.com.au](http://www.haymanreese.com.au)






**HAYMAN REESE**  
**PART No: 100822-WL**  
**HONDA CIVIC HATCH MY12**


## INSTALLATION INSTRUCTIONS

PLEASE ENSURE THAT INSTRUCTIONS ARE UNDERSTOOD PRIOR TO FITMENT


13. Dislodge the LHS door trim (1) along with the front section of the LHS luggage compartment trim (2) and remove the luggage compartment trim (2).

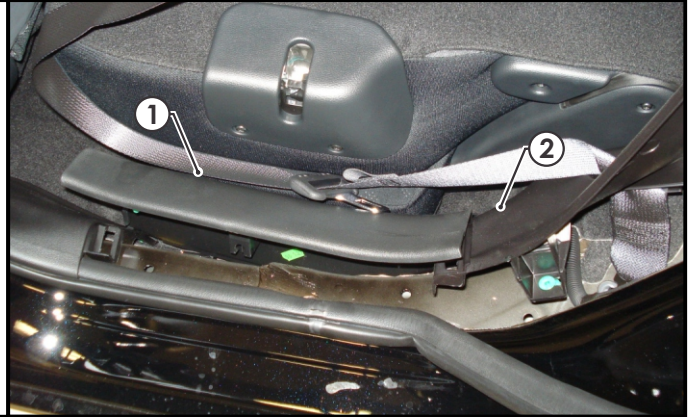

14. If the LHS vehicle grommet (1) is not in use by another accessory, remove the vehicle grommet (1) from the vehicle (go to Step 16).
15. If the vehicle grommet (1) is in use by another accessory, drill a Ø30mm hole (2) using a step drill next to the existing vehicle grommet (1). Spray on rust inhibitor after drilling.

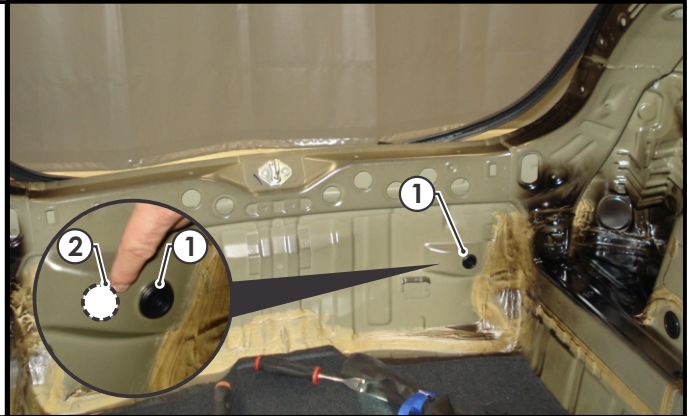

16. Route the trailer patch (P/No: 100822-WL) (1) up along the LHS vehicle harness towards the tail light connectors.

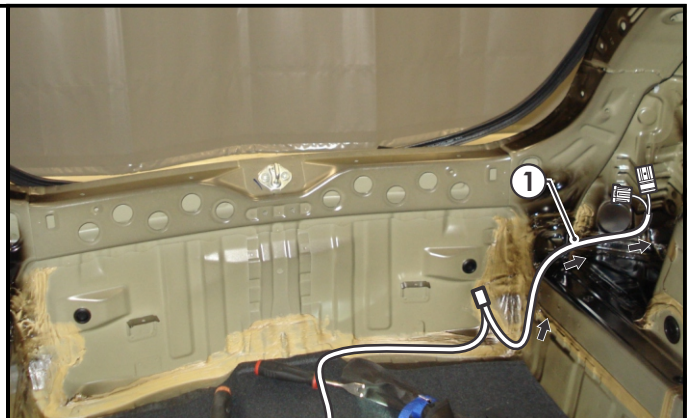

Issue Date 06-09-12

Page 5

Part No: 100822-WL

Hayman Reese (Cequent)  
PO Box 4050, Dandenong South VIC 3164  
Phone 1800 812 017 Email [info@haymanreese.com.au](mailto:info@haymanreese.com.au)

[www.haymanreese.com.au](http://www.haymanreese.com.au)




**HAYMAN REESE**  
**PART No: 100822-WL**  
**HONDA CIVIC HATCH MY12**

## INSTALLATION INSTRUCTIONS


PLEASE ENSURE THAT INSTRUCTIONS ARE UNDERSTOOD PRIOR TO FITMENT

17. Disconnect the LHS vehicle tail light connectors (1) and patch the trailer patch (P/No: 100822-WL) connectors (2) in between.

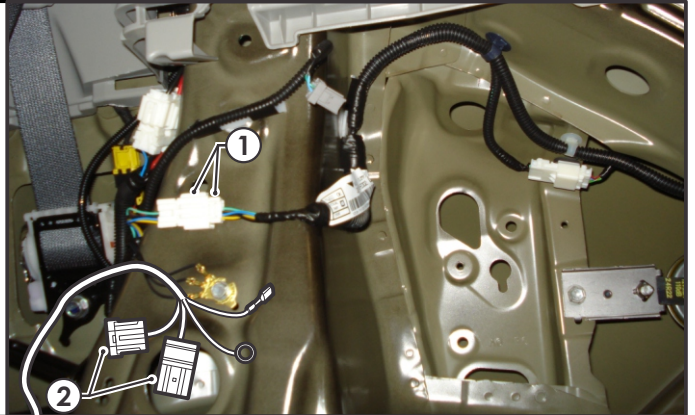


18. Tap into the vehicle connector PINK reverse wire (1) using a supplied ezy-tap (2). Connect the trailer patch ezy-tap terminal (3) onto the ezy-tap (2).
19. Secure the trailer patch ground ring terminal (4) to the vehicle grounding point (5).

Function	Trailer Patch	Vehicle Connector
REVERSE	BLACK	PINK

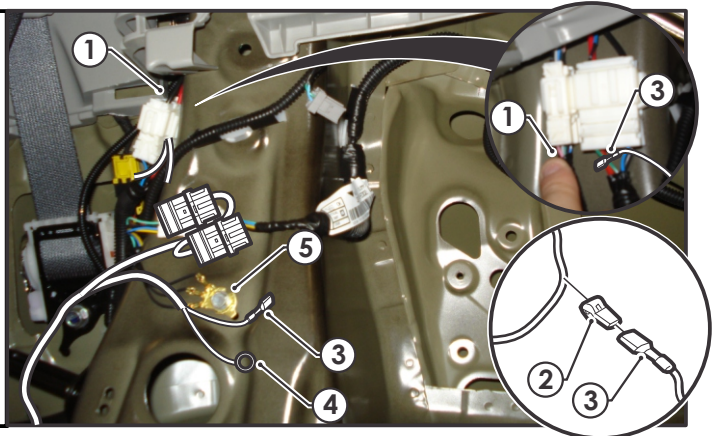

20. Route the trailer patch (P/No: 100822-WL) (1) along the rear of the luggage compartment area towards the RHS tail light connector area.

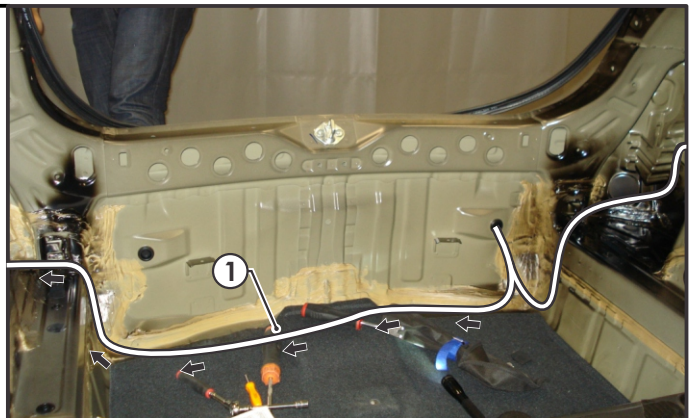

Issue Date 06-09-12

Page 6

Part No: 100822-WL

Hayman Reese (Cequent)  
PO Box 4050, Dandenong South VIC 3164  
Phone 1800 812 017 Email [info@haymanreese.com.au](mailto:info@haymanreese.com.au)

[www.haymanreese.com.au](http://www.haymanreese.com.au)




**HAYMAN REESE**  
**PART No: 100822-WL**  
**HONDA CIVIC HATCH MY12**


## INSTALLATION INSTRUCTIONS

PLEASE ENSURE THAT INSTRUCTIONS ARE UNDERSTOOD PRIOR TO FITMENT

- 21.** Disconnect the RHS tail light connectors **(1)** and connect the trailer patch (P/No: 100822-WL) **(2)** in between.

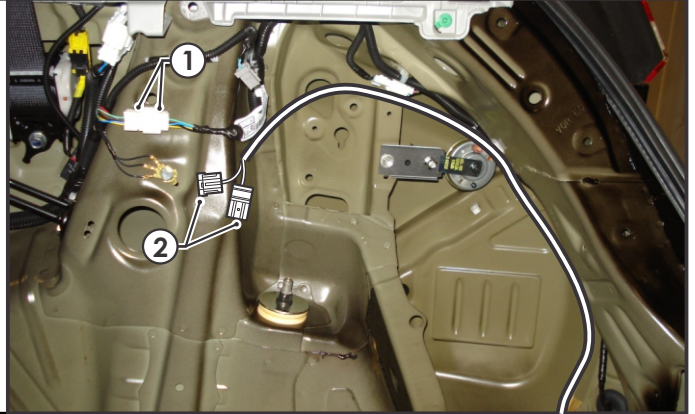

- 22.** Mount the trailer socket **(1)** to the towbar mounting bracket using M4 fasteners (not supplied).
- 23.** Route the tail harness (tail length 1200mm) **(2)** along the towbar and up through the previously drilled out hole **(3)**.
- 24.** Connect the tail harness **(2)** to the trailer patch connector **(4)**.
- 25.** Ensure the tail harness grommet is seated correctly and makes a good seal.  
Secure the grommet in place using a cable tie (not supplied).

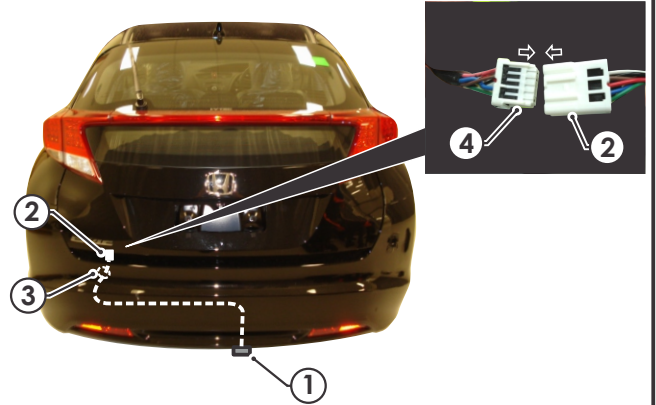

Issue Date 06-09-12

Page 7

Part No: 100822-WL

Hayman Reese (Cequent)  
PO Box 4050, Dandenong South VIC 3164  
Phone 1800 812 017 Email [info@haymanreese.com.au](mailto:info@haymanreese.com.au)

[www.haymanreese.com.au](http://www.haymanreese.com.au)

