
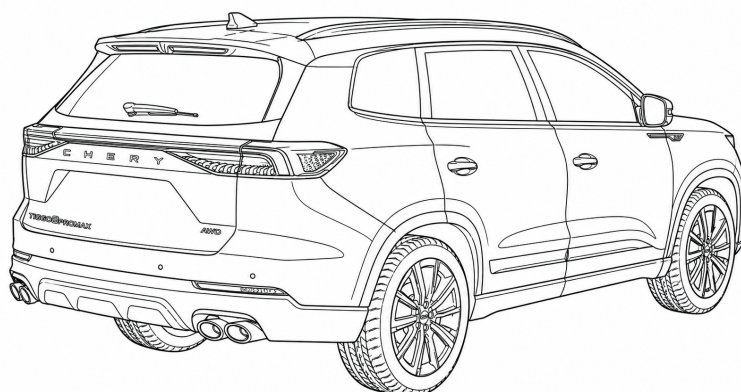


VEHICLE: Chery Tiggo 8 SUV 05/2024 - On
PART NUMBER: 119124

TOWRITE
TOWBARS AUSTRALIA

TOWBAR FITTING INSTRUCTIONS

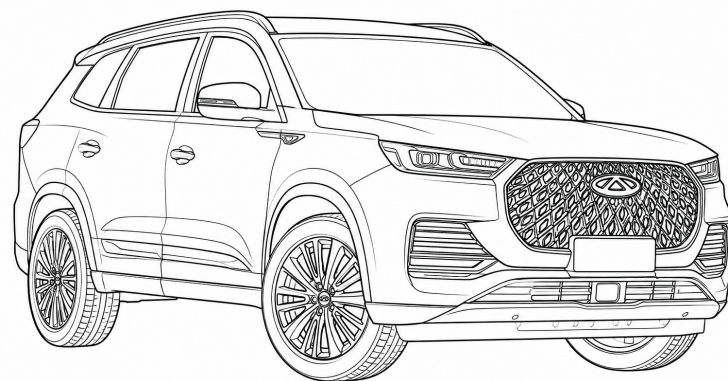

For Trailer Towing Only

Approximate Installation Time: 1.5 hrs
Maximum Towing Capacity Braked: 1300 kg
Maximum Down Ball Weight: 75 kg

Vehicles towing capacity may vary refer to owners handbook

TowRite Towbars Australia
9 Deakin Street
Brendale Qld 4500
AUSTRALIA
1800 869 748

WARNING



ELECTRIC, HYBRID AND PHEV VEHICLES



- Fitting of an EV electric car or HV hybrid vehicle must only be done by qualified personnel.
- The required qualifications may vary depending on the region. Please observe the local legislation and legal directives relating to service to electric vehicles.
- Disregarding these instructions may leave to serious injuries or death.

WARNING

- This product is designed solely for towing and must be loaded exactly as outlined in your vehicle's Owner's Manual.
- If used with a bike carrier there is a 25% reduction in the towbar or vehicle ball weight capacity whichever is lowest.
- Do NOT drill, cut, weld, or modify this towbar under any circumstances.
- You might need to drill into the vehicle to install the parts. Before you drill, take a quick look behind the chassis rail and body panels to make sure nothing is in the way.
- The stated load ratings apply only where the trailer is equipped with an appropriately rated and functioning braking system.
- If installed in any position other than what is shown in these instructions, the towball mount may interfere with or obstruct certain vehicle features (such as tailgate operation or chassis clearance).

GENERAL


- Before installing this towbar, read the fitting instructions thoroughly and ensure all installation hardware is correct.
- Confirm the towbar is compatible with your vehicle, and consider any modifications or accessories (tray, canopy, suspension, etc.) that may affect installation.
- After drilling, clear away all metal filings, remove burrs, and apply a rust inhibitor to any exposed metal surfaces.
- The supplied high-tensile fasteners are essential to achieving the specified rating. If replacements are needed, ensure they are of the same grade (refer parts table on Page 3) and quality.
- Routinely check towball is tight before towing.
- Check all fasteners routinely and regularly.
- Be aware of changes in vehicle shape and bumper designs as well as any accessories that may alter the installation of this product.
- Bumper cut instructions are a guide only, ensure correct area is marked out prior to cutting.
- TowRite advises the removal of the ball mount when not in use to provide a clear view of the vehicle's registration plate if obscured.
- These instructions are provided as a guide only. TowRite accepts no responsibility for any changes to vehicle or fitment.
- Check the towball is securely tightened before towing.
- The towbar comes with 2 x compliance labels - one goes on the towbar and one in the driver's side door well.
- A two-person lift is recommended for installation.
- It is recommended that installation is carried out by a trained professional.

Ensure that all lights and systems are functioning properly. Check the vehicle dash for any warning lights and visually inspect the vehicle for any damage before commencing work.

Torque Settings 8.8 Grade High Tensile Bolts

Bolt Size	Torque
M8	22 Nm $\pm$ 10%
M10	46 Nm $\pm$ 10%
M12	77 Nm $\pm$ 10%
M14	146 Nm $\pm$ 10%
M16	190 Nm $\pm$ 10%
Tow Ball	350 Nm $\pm$ 10%

CONTENTS

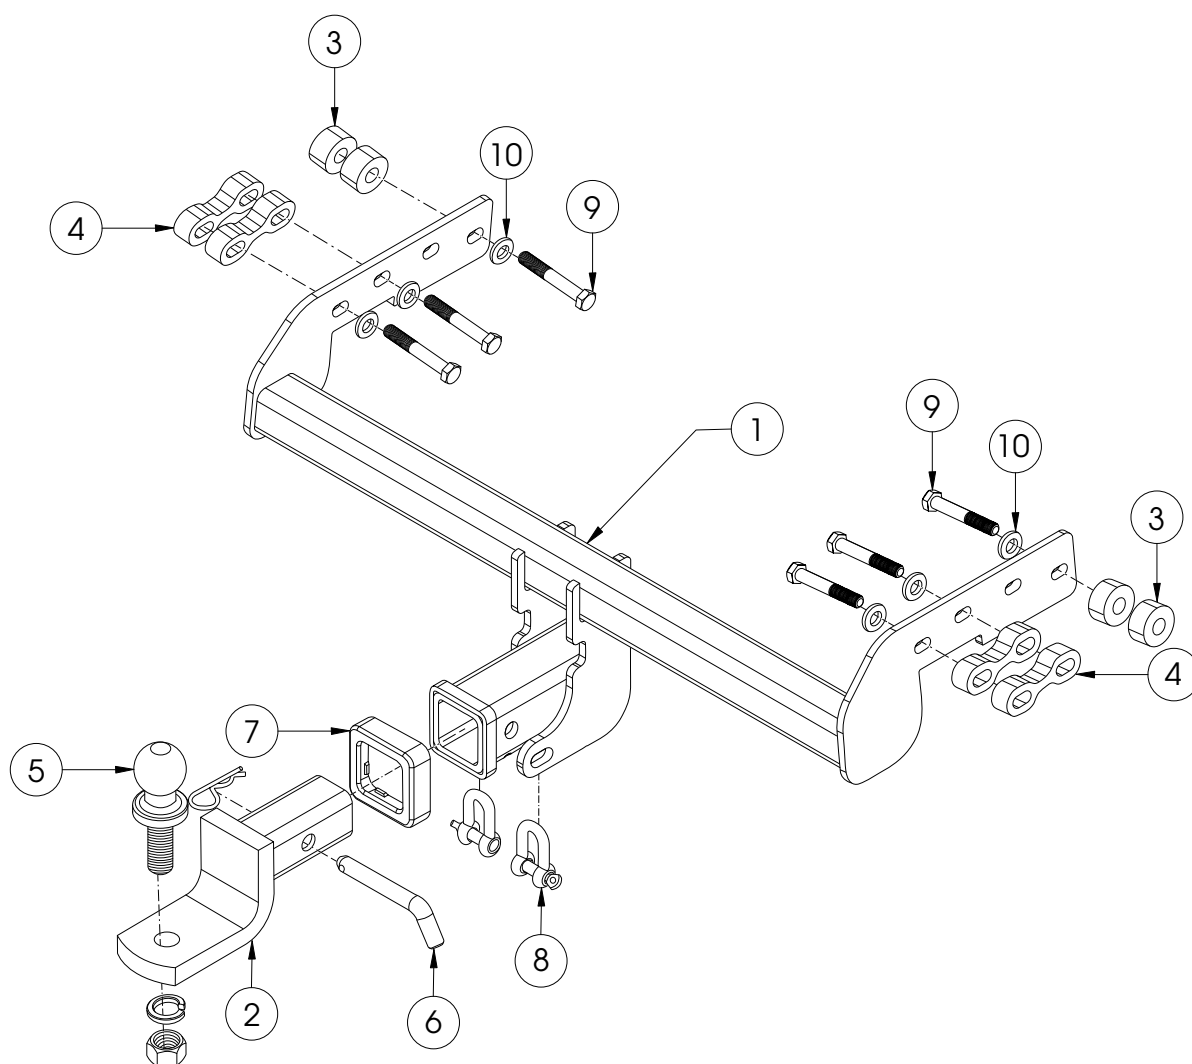

ITEM NO.	PART DESCRIPTION	QTY
1	TOWBAR ASSEMBLY	1
2	TB00 BALLMOUNT	1
3	FRONT SPACER	4
4	REAR SPACER	4
5	50 mm TOWBALL	1
6	HITCH PIN AND CLIP	1
7	PLASTIC SHROUD	1
8	D SHACKLE	2
9	M12 X 1.25 X 80 mm BOLT	6
10	M12 WASHER	6

TOWBAR INSTALLATION

1

To remove the bumper:

- Remove 2 x screws located in the rear wheel arch.
- Remove the 3 x bolts underneath the rear part of the bumper.
- Pop off the cover next to the tail light and the round cover below it. Remove the 2 x screws and remove the tail light.
- The bumper should unclip and come off.


2

Fit side plate of towbar assembly ① to chassis with 2 x front spacer ③ and 2 x rear spacer ④.


Loosely secure using 3 x M12 bolts ⑨ with 1 x M12 washer per bolt ⑩.

Repeat for the other side.

LHS

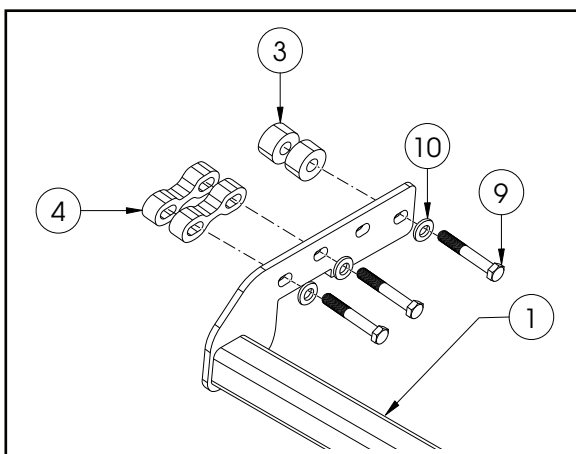

RHS

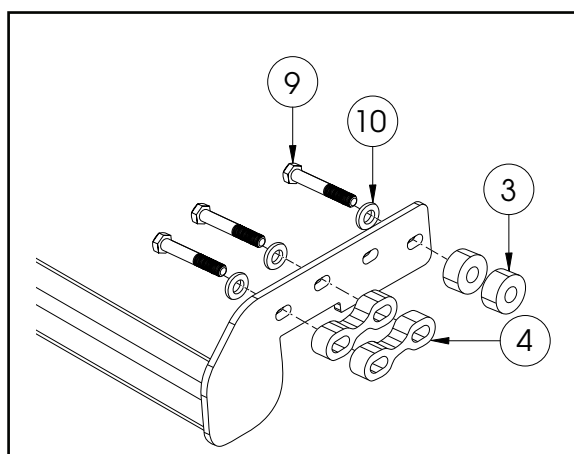

3

Ensure all fasteners are tightened according to the torque settings on Page 3.

4

Refit bumper and lights in reverse order.

BALLMOUNT INSTALLATION


5

Fit the plastic shroud (7) and ballmount (2) into the receiver.

Fasten with hitch pin & clip (6).

Attach the D shackles (8).

Fit the towball (5) to the ballmount (2).

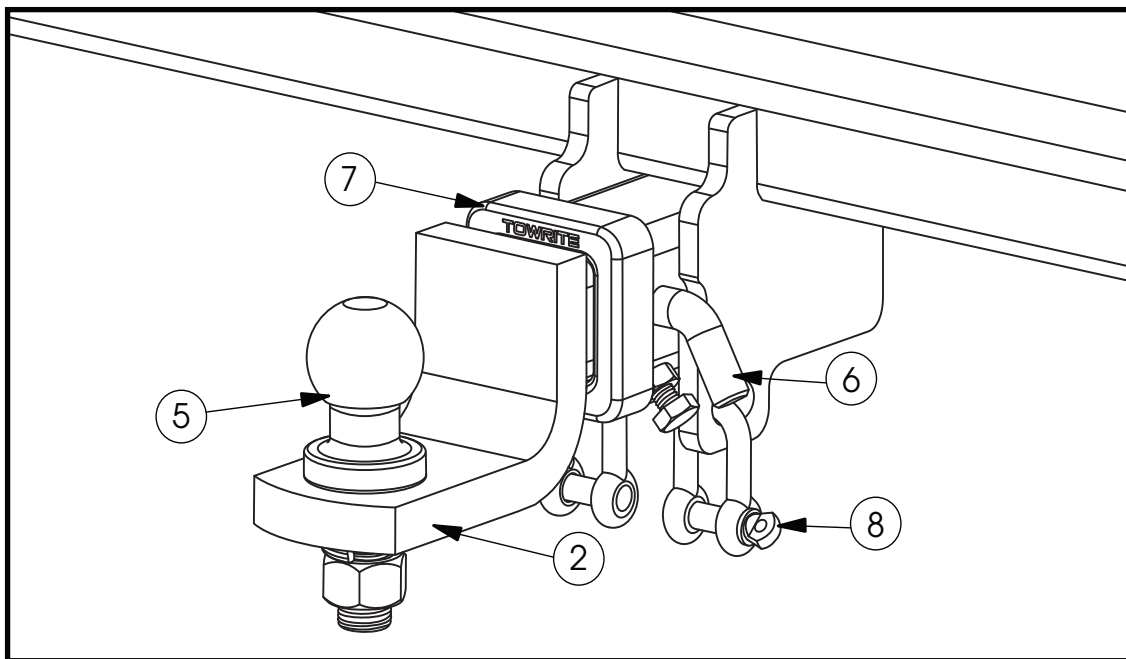


Please see below for Ballmount installation video.



LABEL INSTALLATION

CLEAN SURFACES

Attach 1 x compliance label on the towbar and the second on the drivers side door well.

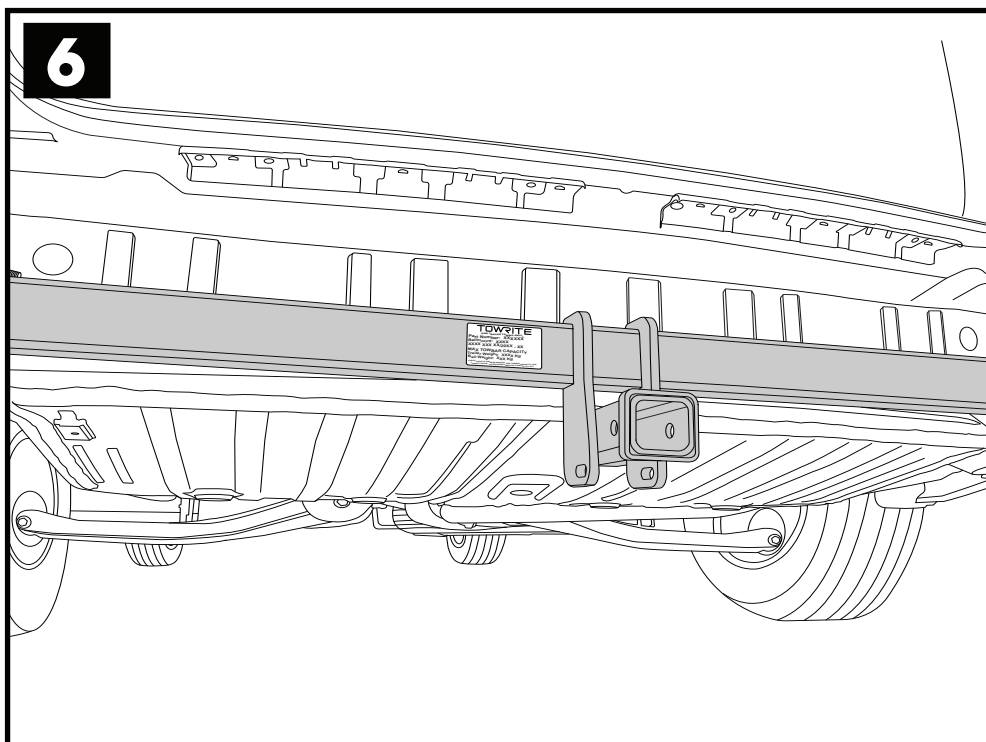

Maintenance and Care

Here are some maintenance and care tips to allow for trouble free operation of your towbar for years to come.

- A) TowRite recommend removal of the ball mount/tongue when not in use.
- B) Check all fasteners regularly and tighten if necessary. If any fasteners are worn or damaged use the same grade replacements.
- C) Ensure towing and down ball weights do not exceed manufacturers specifications (this may differ between vehicles - check owners handbook). This is the driver's responsibility.
- D) Use a spray lubricant on contacts for wiring connections as well as removable and insert able parts regularly (ie. Trailer plug and ball mount and pin and clip).
- E) Check towball for wear and tear regularly, ensure towball is correctly fastened and torqued before towing.

WARRANTY INFORMATION

Your towbar comes with a limited lifetime warranty covered nationwide.
For warranty information please visit www.towritetowbars.com.au

Contact us at warranty@towritetowbars.com.au or call us on 1800 869 748

TOWRITE

TOWBARS AUSTRALIA

**TowRite Towbars Australia
9 Deakin Street
Brendale Qld 4500
AUSTRALIA
1800 869 748**

info@towritetowbars.com.au
www.towritetowbars.com.au