


### Installation instructions

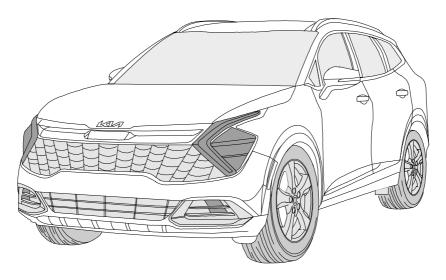

## 750158EJ

## KIA Sportage / HEV / PHEV


01/22 >>










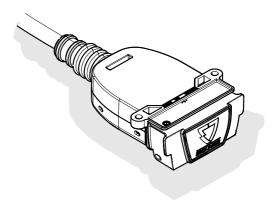











#### Reference:

The following information must be reviewed before beginning the assembly:

The installation instructions are to be thoroughly read.

The installation should be carried out by qualified personnel with the relevant technical knowledge.


The vehicle manufacturers' current technical notices and information on retrofitting must be followed.


The removal and replacement instructions found in the current repair manuals must be followed.

It must be ensured that the vehicle is technically suitable for the installation of a trailer hitch.


750158-210923B8 1 / 16


## **OVERVIEW**

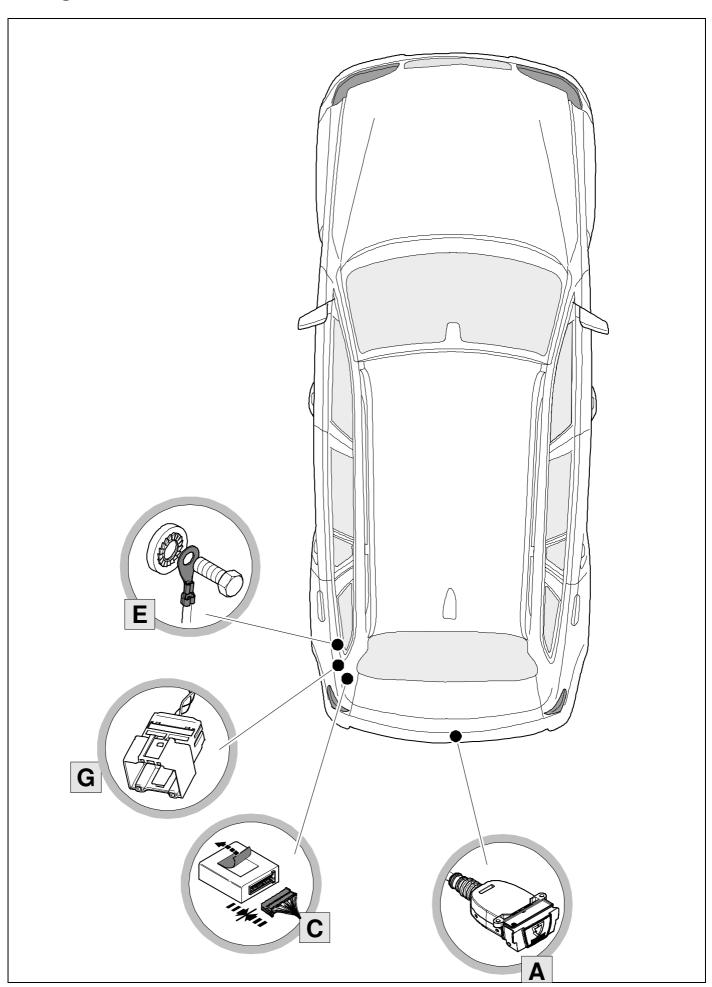


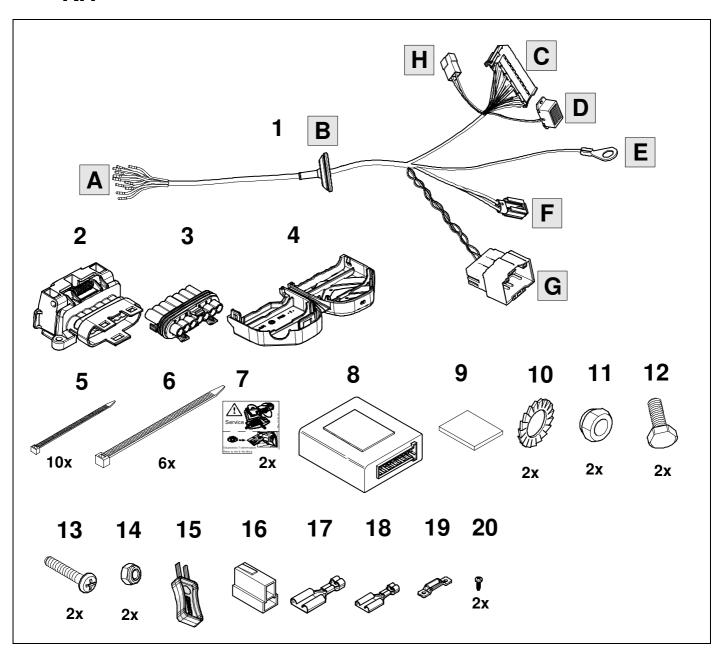


**TOOLS** 

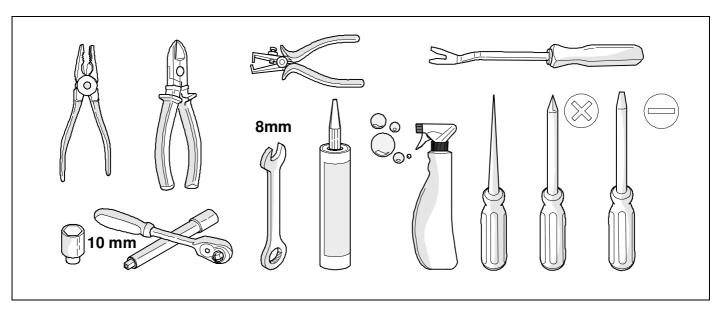


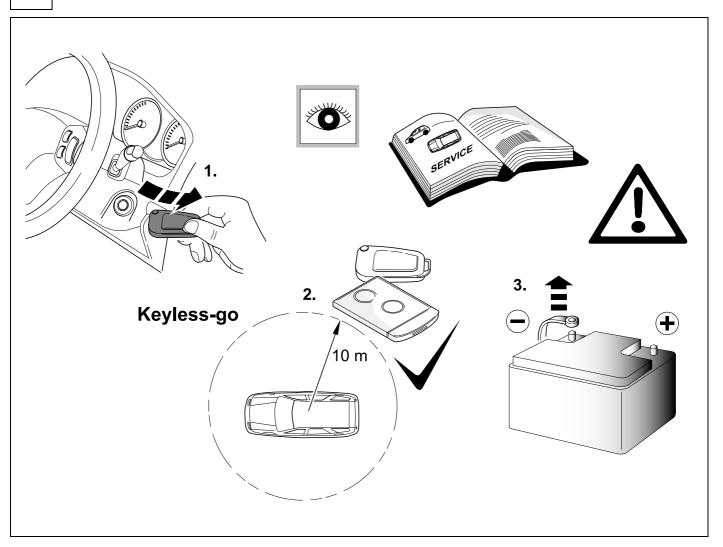


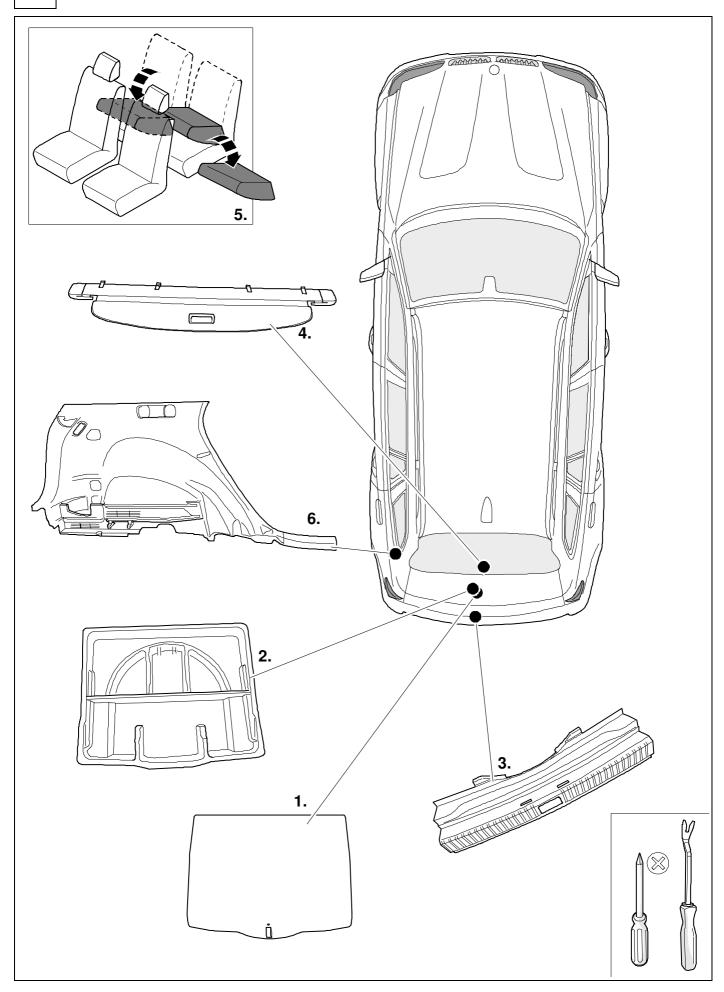

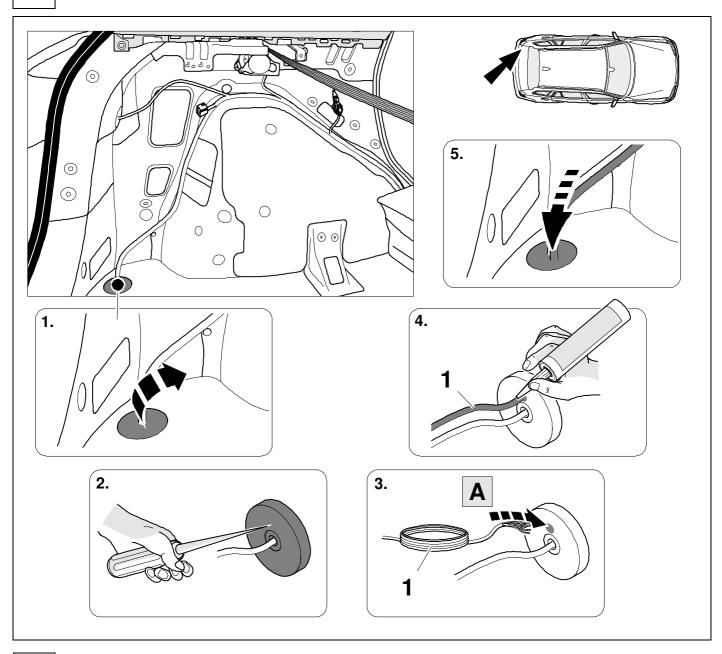





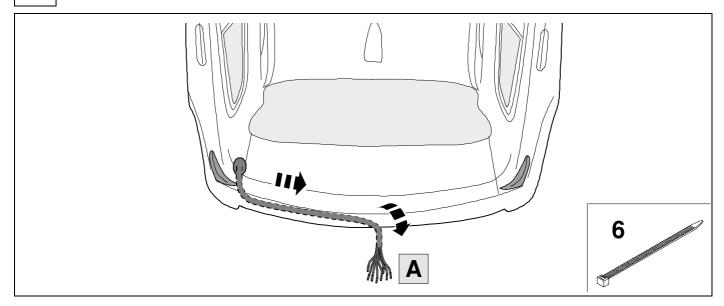


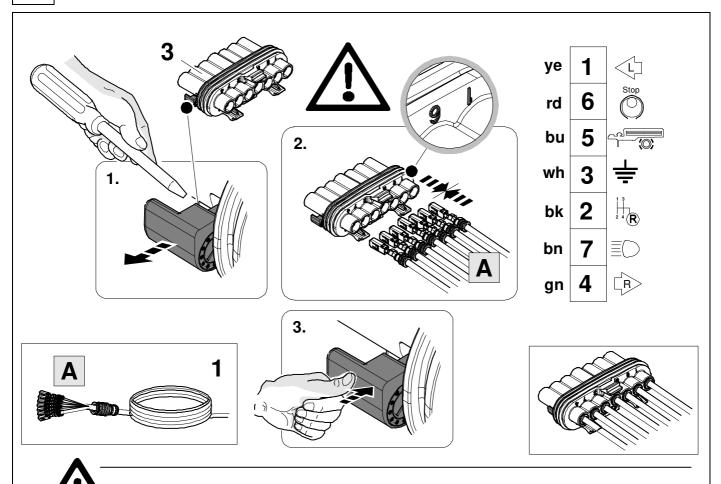

# In case of wrong pin insert:

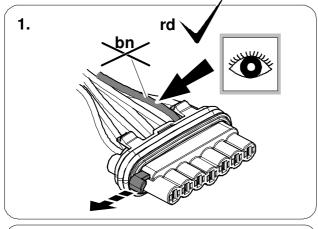

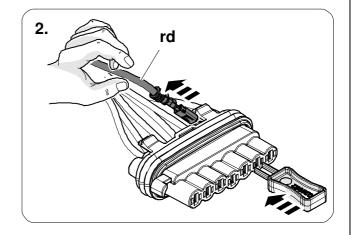

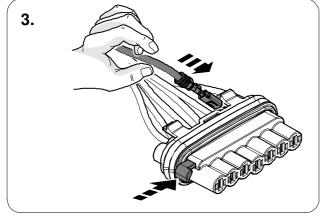





750158-210923B8 7 / 16





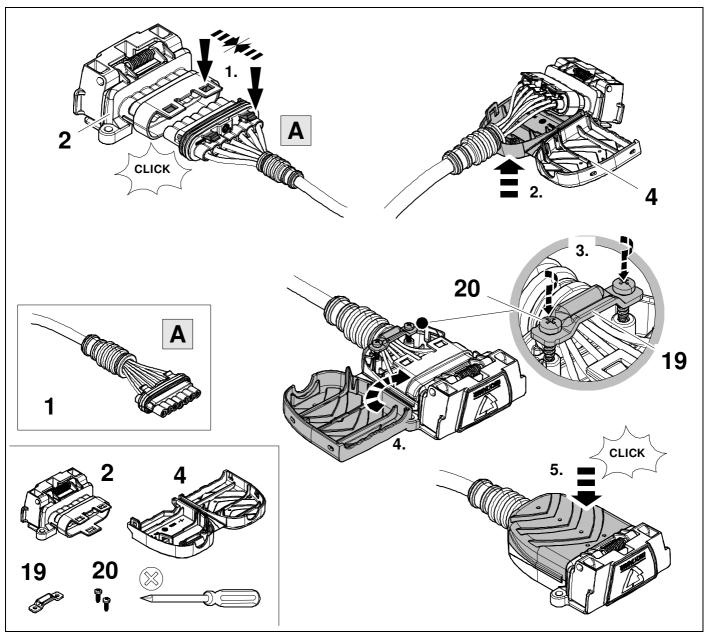


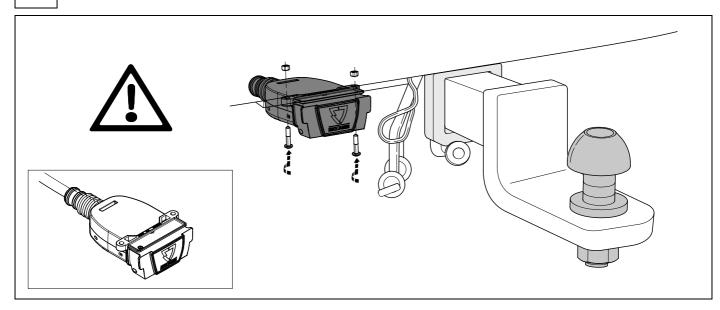




1	ye	$\Diamond$
2	bk	1 3 2 4 (R)
3	wh	÷
4	gn	ightharpoonup
5	bu	
6	rd	Stop
7	bn	

9	bk	wh	gy	gn	rd	bu	ye	bn	pu	or	no
GB	black	white	grey	green	red	blue	yellow	brown	purple	orange	not occupied

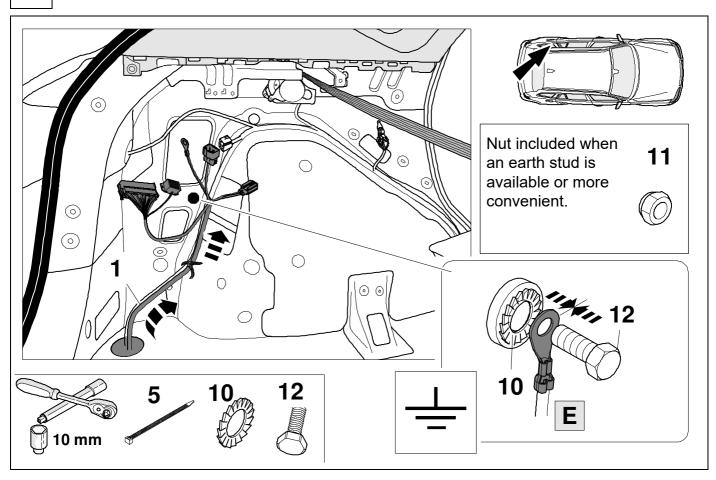








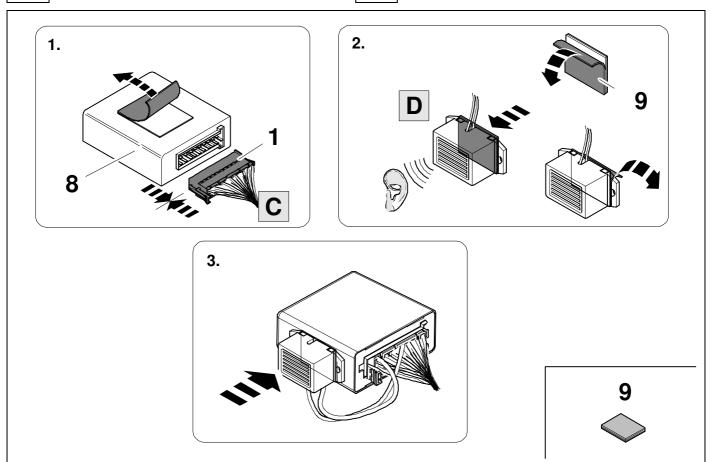



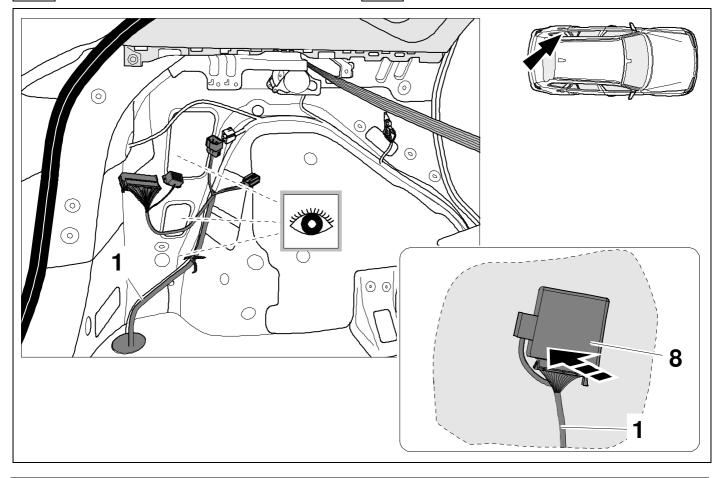

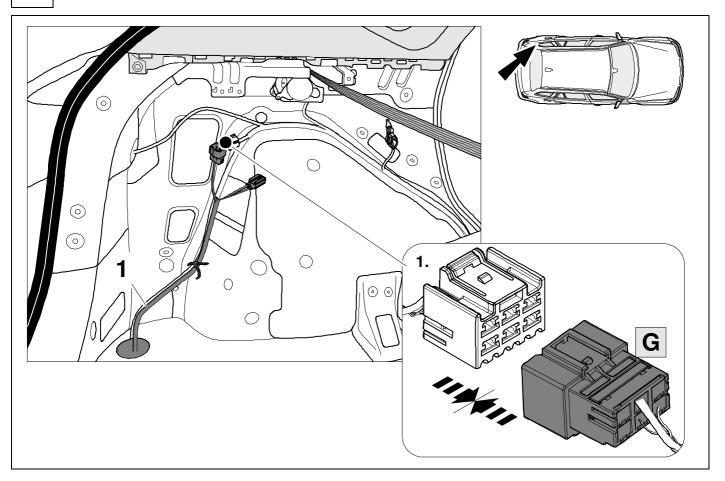

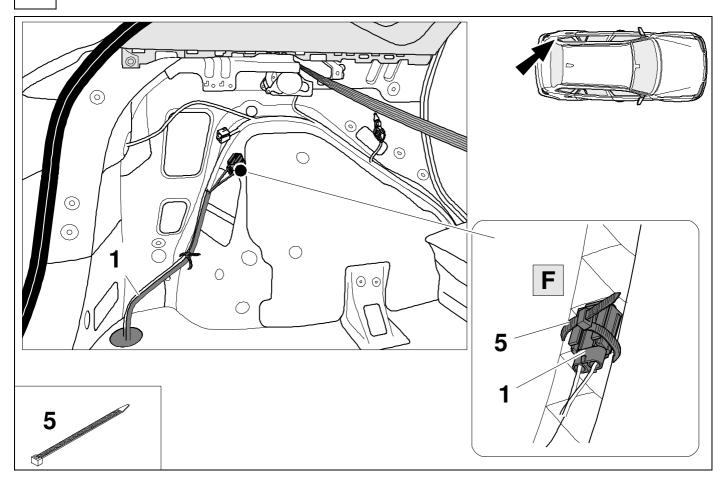

# 15 OPTIONAL













## **Trailer Brake Preparation**







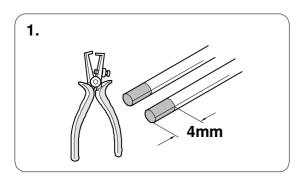


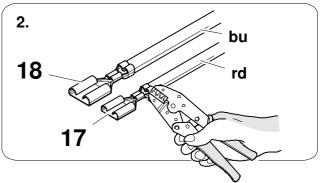

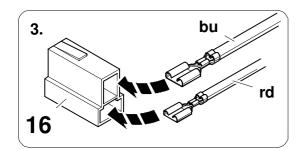


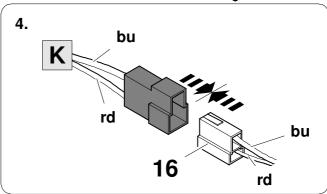




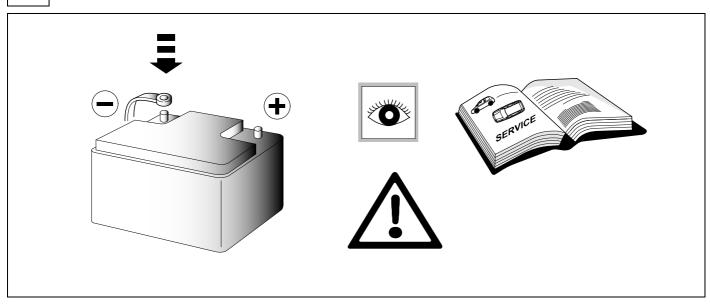


## 17 CHECK ALL LIGHTING FUNCTIONS

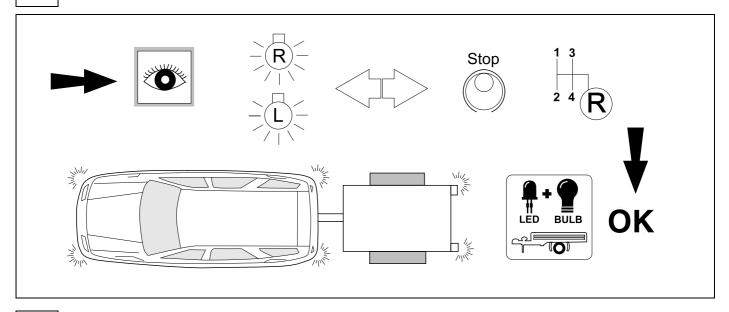


## **18 CHECK BULB OUT DETECTION**

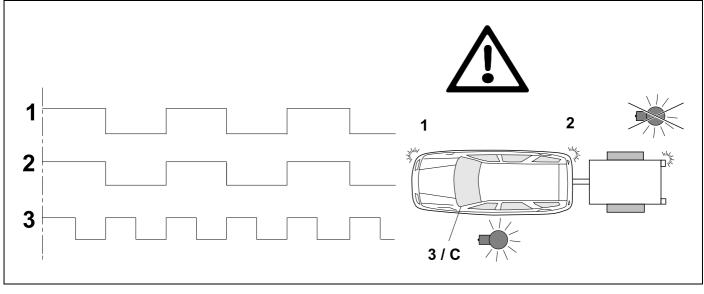





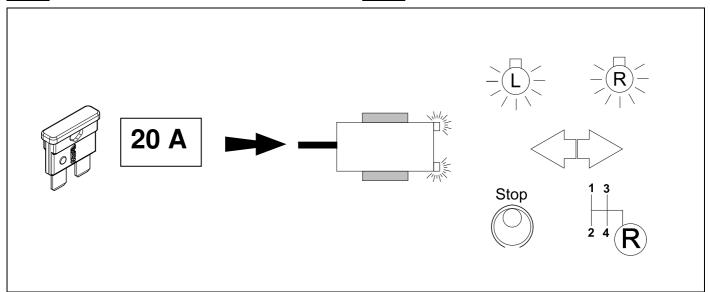


750158-210923B8 13 / 16

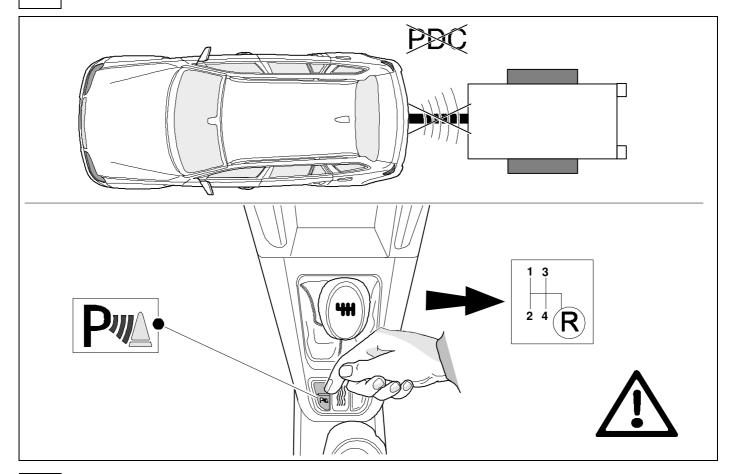

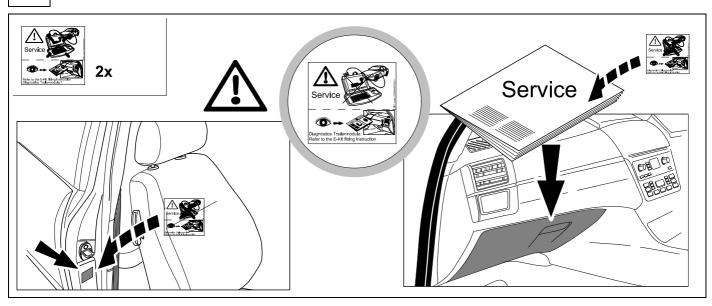

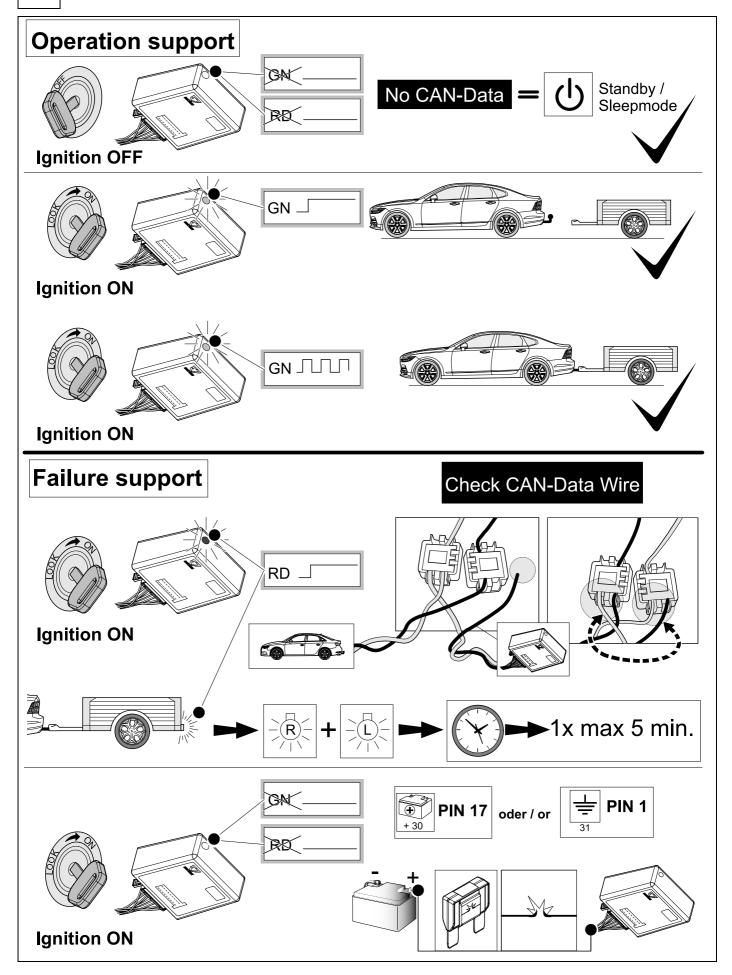

750158-210923B8 15 / 16

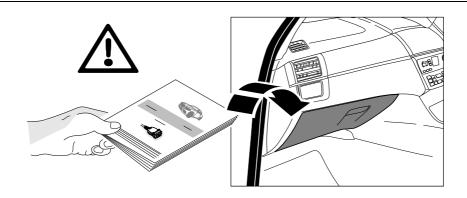



Subject to change in terms of construction, equipment and colour, and may contain errors.

The information and illustrations are non-binding.