

## Fitting Instructions: AUD02H

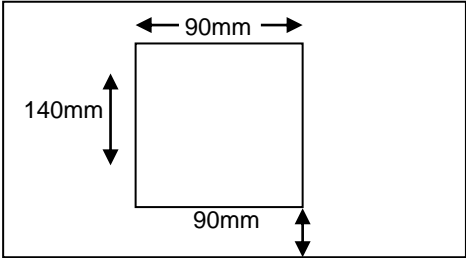
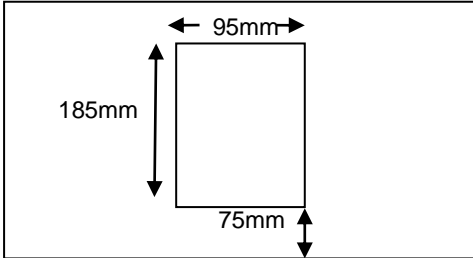
**Vehicle:** AUDI Q5/SQ5 (3/2009 – 1/2017)

PORSCHE Macan (6/2014 On)

**Towing Capacity:** 2400 / 240Kgs

**Fitting Kit:** 2x D shackles

2x Towbar Rating Labels

1.	Remove 4 screws base of bumper fascia using T25 torx bit.
2.	Plastic wheel trim around wheel arch must be removed which is clipped in position, locate 3 torx screws located vertically in the upper area behind wheel well liner and 1 screw located behind wheel well trim either side remove with T25 torx bit.
3.	Open tail gate and remove 2 plastic bumper holding screws (1 either side ) using T25 torx bit.
4.	Remove cargo area flooring and rear panel surrounding lock area, this is clipped into position.
5.	Remove rubber grommets located in boot area back panel (1 either side), use 10mm tube socket to remove bumper holding nuts.
6.	Remove passenger side interior panel, disconnect 2 wiring harnesses and push out rubber grommet, feed out to rear bumper. Using 10mm socket remove bumper holding nut, repeat on driver side.
7.	Remove rear bumper bar.
8.	Remove Crash Support Panel holding bolts in boot and detach crash support panel and discard.
9.	Fit towbar arms into rear chassis and align with original holes of crash support panel. Refit original bolts. Ensure towbar is central and tighten.
11.	<p><b>Note:</b> On certain Macan and Q5 models a bumper cut is required. See Below.  <b>(On certain Q5 models with raised profile in bumper, cut to 155mm)</b></p> <div style="display: flex; justify-content: space-around; align-items: flex-start;"> <div style="text-align: center;"> <p><b>AUDI Q5</b></p>  </div> <div style="text-align: center;"> <p><b>PORSCHE MACAN</b></p>  </div> </div>
12.	Refit items removed in steps 1 – 7 in reverse.
13.	Apply Towbar Rating Labels to driver's side door sill <u>and</u> non-removable part of the towbar.