

**Fitting Instructions: GW04H**

**Vehicle:** GWM TANK  
**Towing Capacity:** 2500kg / 250kg

**Fitting Kit:**

- 8x 14 x 1.5 x 35mm Bolts with star & Flat washers.
- 2x D-Shackles.
- 2x Towbar Rating Labels.

1.	Remove centre bumper cover.
2.	Cut under section of bumper as per Figure 1 picture. 95mm up – 170mm wide
3.	Mount Towbar to existing holes using 14mm bolts star and flat washers supplied.
4.	Refit centre bumper cover.
5.	ECM01 Required. Figure 2. To find location of wiring, remove rear floor mat, remove sub-woofer, then remove moulded tray. Wiring located passenger side module.
6.	Apply Towbar Rating Labels to driver's side door sill <u>and</u> non-removable part of the towbar.

Fig 1

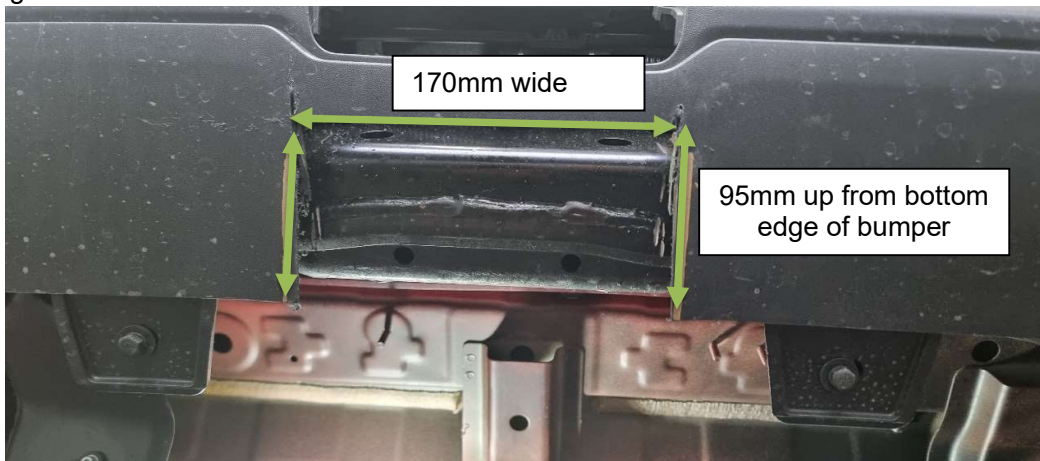


Fig 2

