

Fitting Instructions: KIA011 & KIA011H

Vehicle: KIA EV6 2021 on

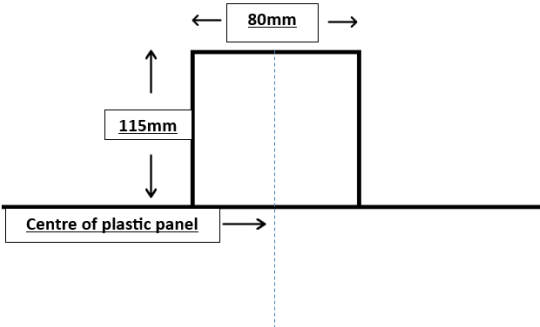
Towing Capacity: 1600/100kgs

Fitting Kit: 6 – 12 x 1.25 x 50mm Fine Thread Bolts, Star & Flat washers.

2 – 20mm Thick Spacer Plates (3 holes).

2 – Dee Shackles.

ECM01 Required.

1.	<p>Remove plastic panel undercar attached to the rear bumper bar. Mark centre of plastic panel and cut as per picture below. (115mm long x 80mm wide)</p> 
2.	<p>Remove power plug located on passenger side rear bumper to allow easy access for tow hitch side arm fitment.</p>
3.	<p>Mount spacer plates supplied (tapered end to front of car) to either side of rear chassis, align with existing 12mm threaded holes.</p>
4.	<p>Mount towbar to rear chassis, align with spacer plate holes and existing holes in chassis, fit 12mm bolts complete with star then flat washers, tighten.</p>
5.	<p>Remount power plug to rear bumper original position.</p>
6.	<p>Refit plastic panel removed in step 1.</p>
7.	<p>Apply Towbar Rating Labels to driver's side door sill <u>and</u> non-removable part of the towbar.</p>

