


13MM QUICK ACTION TRAILER SAFETY CHAIN COUPLING

- SUITS SAFETY CHAINS UP TO 13MM DIAMETER
- RATED FOR USE UP TO 3.5 TONNE ATM
- FULLY TESTED AND COMPLIANT TO AS4177.4
- FULLY TESTED AND COMPLIANT TO GOVT. ADR 62/02
- QUICK AND EASY TO INSTALL
- IDEAL FOR CARAVANS, BOATS, HORSE FLOATS AND TRADESPEOPLE
- LEGAL ON ALL AUSTRALIAN ROADS
- DESIGNED AND ENGINEERED SPECIFICALLY FOR SAFETY CHAIN CONNECTION

MAWBY HOOK



**AUSTRALIAN
COMPLIANT**

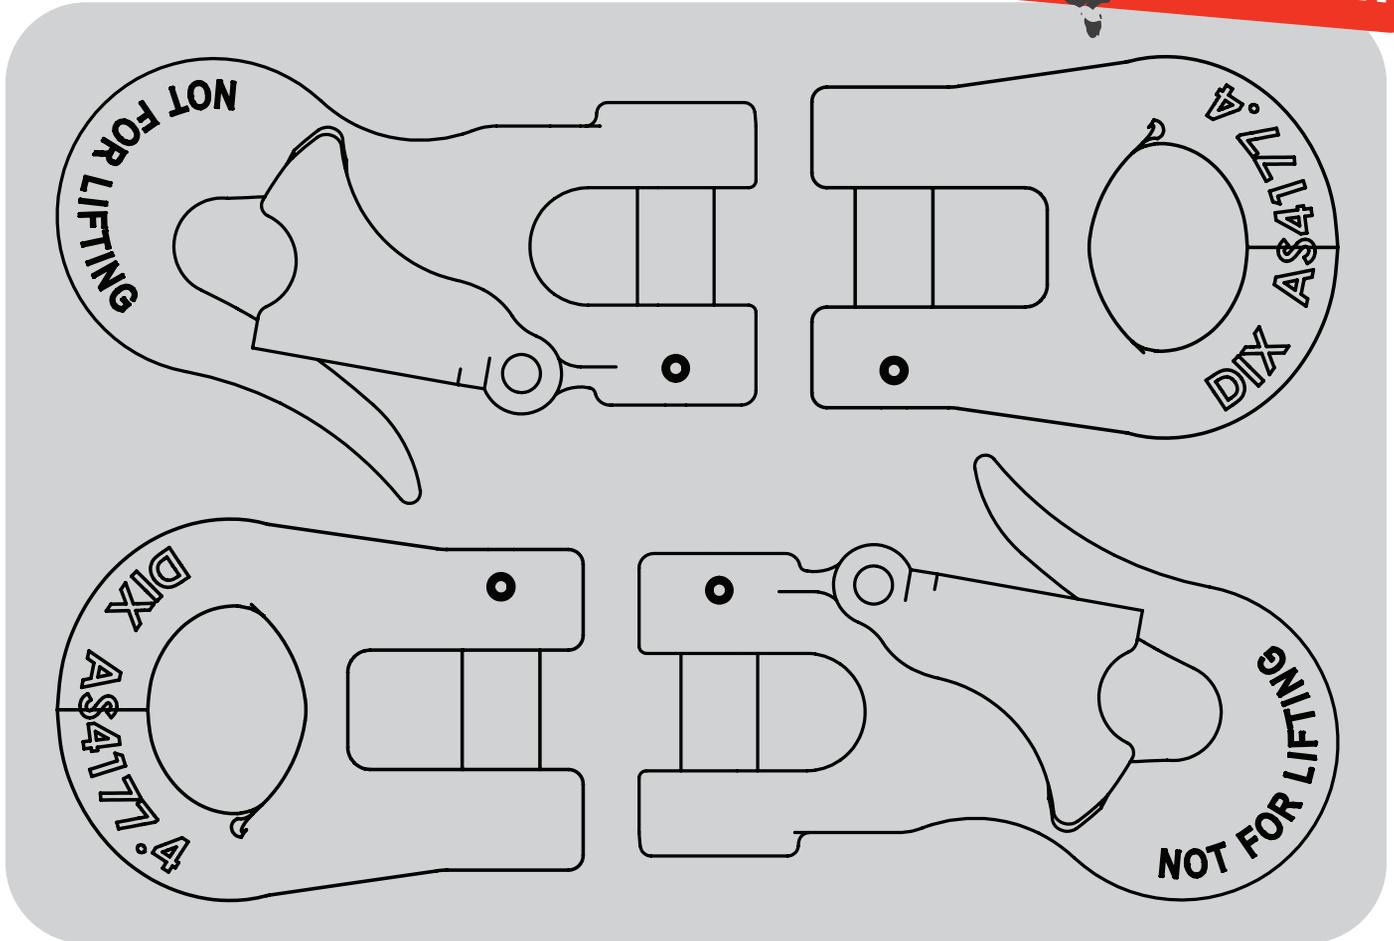

DIX
Engineering



DIXENGINEERING.COM / MAWBYHOOK.COM.AU

INCLUDES

- 2X HOOKS
- 2X COUPLINGS
- 2X LOAD PINS
- 4X SPRING PINS

FITTING INSTRUCTIONS

1. Mount the coupling onto the towbar safety chain coupling point. Insert load pin into coupling and retain using supplied spring pin.
2. Position the hook on the safety chain by selecting a link on the safety chain that keeps the chain as short as possible, but allows complete movement of the trailer.
3. Check that the selected chain length allows hook and coupling to be coupled and uncoupled easily.
4. Mount the hook to the safety chain by inserting the load pin and retain using the supplied spring pin.

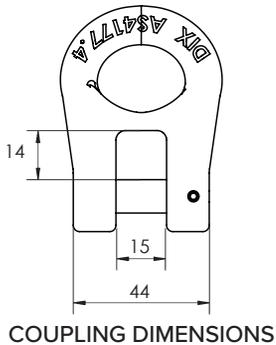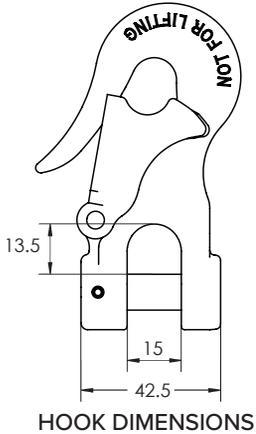

VIDEO INSTRUCTIONS



FULLY TESTED
AND COMPLIANT
TO AS4177.4

FULLY TESTED
AND COMPLIANT
TO GOVT.
ADR 62/02

**DESIGNED IN AUSTRALIA FOR
AUSTRALIAN CONDITIONS BY
G.J. DIX AND SONS PTY LTD**



DIX
Engineering

DIXENGINEERING.COM / MAWBYHOOK.COM.AU

NOT TO BE USED AS A LIFTING DEVICE. ONLY TO BE USED AS A TRAILER SAFETY CHAIN COUPLING. IF THE VEHICLE IS INVOLVED IN AN ACCIDENT THE HOOK AND COUPLING MUST BE INSPECTED FOR SIGNS OF DAMAGE. IF THE HOOK OR COUPLING ARE FOUND TO BE DAMAGED, REPLACE IMMEDIATELY. MADE IN CHINA.