

BORONIA TOWBARS P/L
1/12 EDINA ROAD
FERNTREE GULLY
VIC 3156
PH: (03) 9752 2642

TOY17H FITTING INSTRUCTIONS
KLUGER WAGON 2003 – 8/07

REMOVE REAR BUMPER BAR.

REMOVE IMPACT BEAM & FOAM BOLSTER.


REMOVE TIE DOWN BRACKETS FROM REAR CHASSIS, REFIT DRIVER SIDE TIE DOWN TO PASSENGER SIDE, REFIT PASSENGER SIDE TIE DOWN TO DRIVERS' SIDE, (THESE BRACKETS WILL NOW ALIGN WITH TOW HITCH SIDE ARMS)

FIT TOW HITCH TO EXISTING STUDS USING 6 NUTS PREVIOUSLY REMOVED WITH FLAT WASHERS SUPPLIED – TIGHTEN.

FIT 16mm BOLTS SUPPLIED COMPLETE WITH SPRING & FLAT WASHERS VIA TIE DOWNS THEN TOW HITCH SIDE SUPPORT ARMS – TIGHTEN.

REFIT FOAM BOLSTER.

BUMPER BAR MUST BE CUT PRIOR TO REFITTING, AS PER DIAGRAM BELOW. ONCE BUMPER HAS BEEN CUT, REFIT.

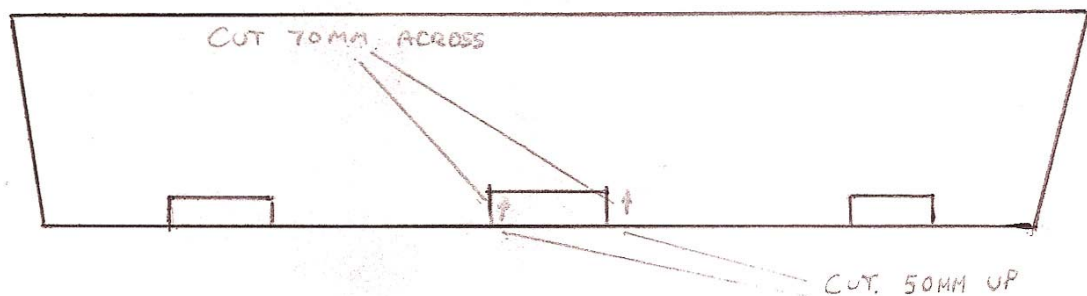

FITTING KIT:

2 – 16 x 35mm BOLTS, SPRING AND SQUARE FLAT WASHERS

6 – 10mm FLAT WASHERS.

2 – DEE SHACKLES